

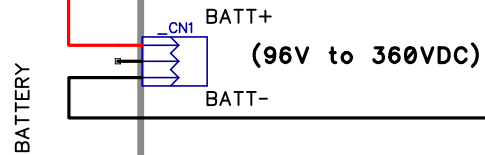



POWER SUPPLY SECTION

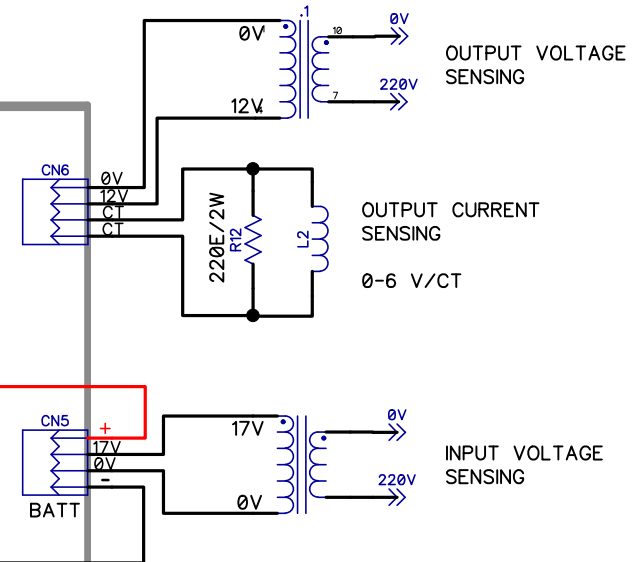


DISPLAY SECTION

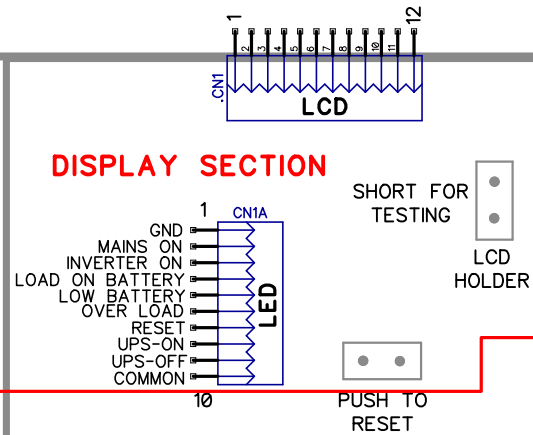


INVERTER SECTION

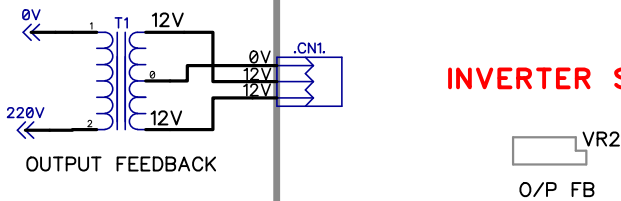



DRIVER SECTION

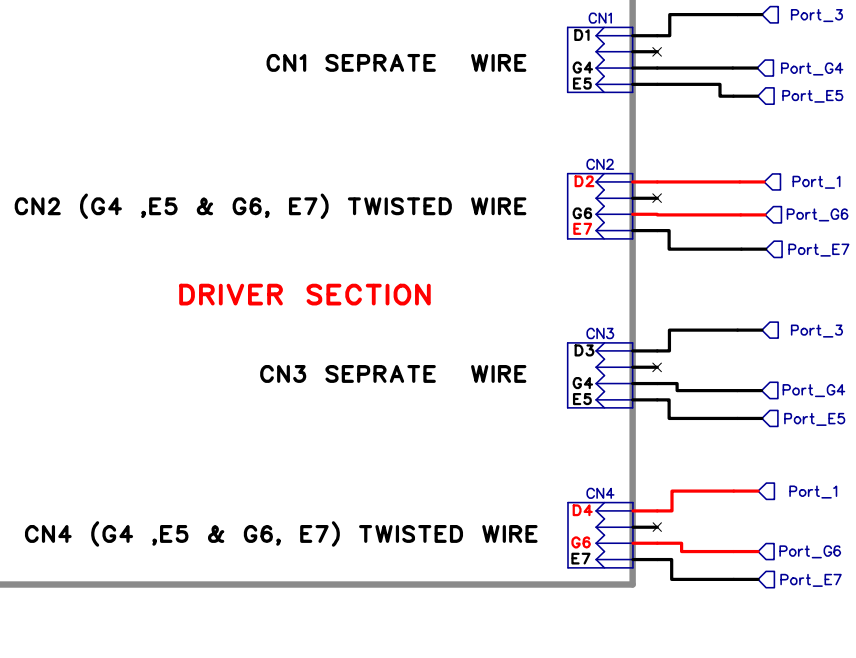


POWER SUPPLY SECTION

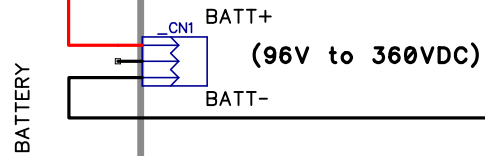


DISPLAY SECTION

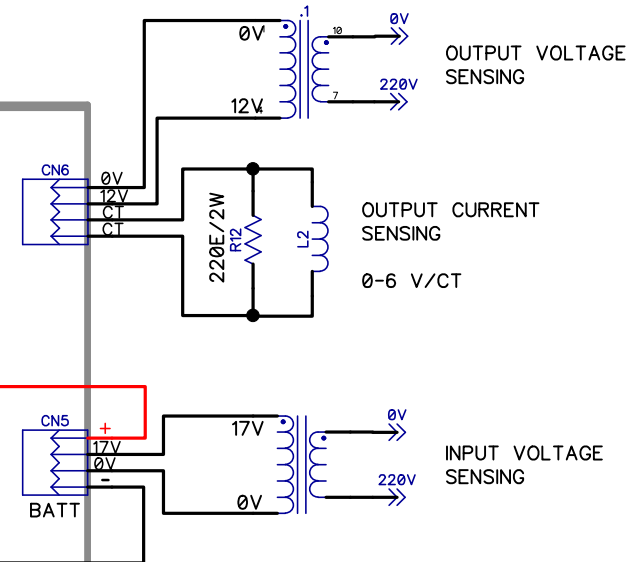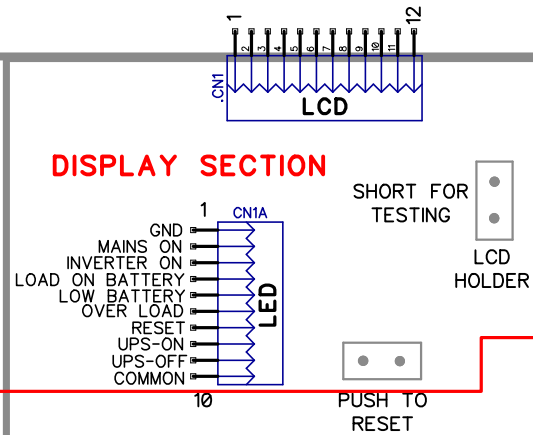

INVERTER SECTION

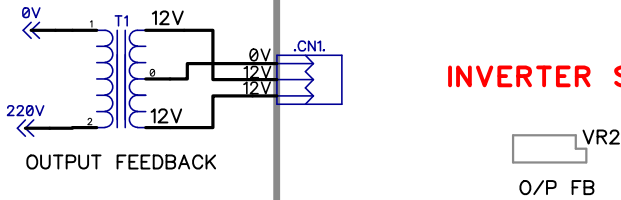

DRIVER SECTION

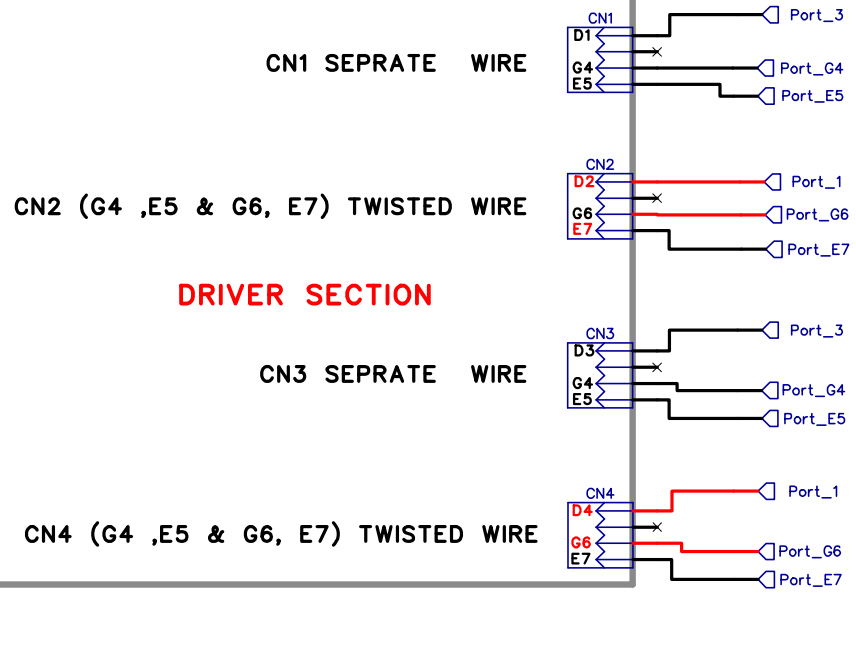

6 Pulse Charger

- VR-1 : DC high cut
- VR-2 : Set charging current ranging from 2A to 10A
- VR-3 : Set charging voltage ranging from 240V to 552V
- Connector no. CN4
Between R1 & Y1 : 10.4V
Between B1 & R2 : 10.4V
Between Y2 & B2 : 10.4V
- Check Power supply : -12 & +12
- Check Pulse Point : 2V
- Check output PWM from connector CN5 to CN10 : 1.5V to 2.V

