

MOUNTING, OPERATING, TESTING & MAINTENANCE INSTRUCTIONS FOR ROTEX 3/2 INTERNAL PILOT OPERATED SOLENOID VALVE MODEL I3003V01, I3003V01RP, I3005V01 , I3005V01RP, P3001V01, P3003V01, P3007, P3009

ROTEX retains all rights to this publication.

All details within this manual and the catalogue are subject to change without manner.

ROTEX will not be responsible for any damage whatsoever arising from the use of the Solenoid Valve, due to misuse or incorrect installation or misinterpretation of the information contained herein.

OPERATING PRINCIPLE

NORMALLY CLOSE VALVE [I3003V01, I3003V01RP, P3001V01, P3007]

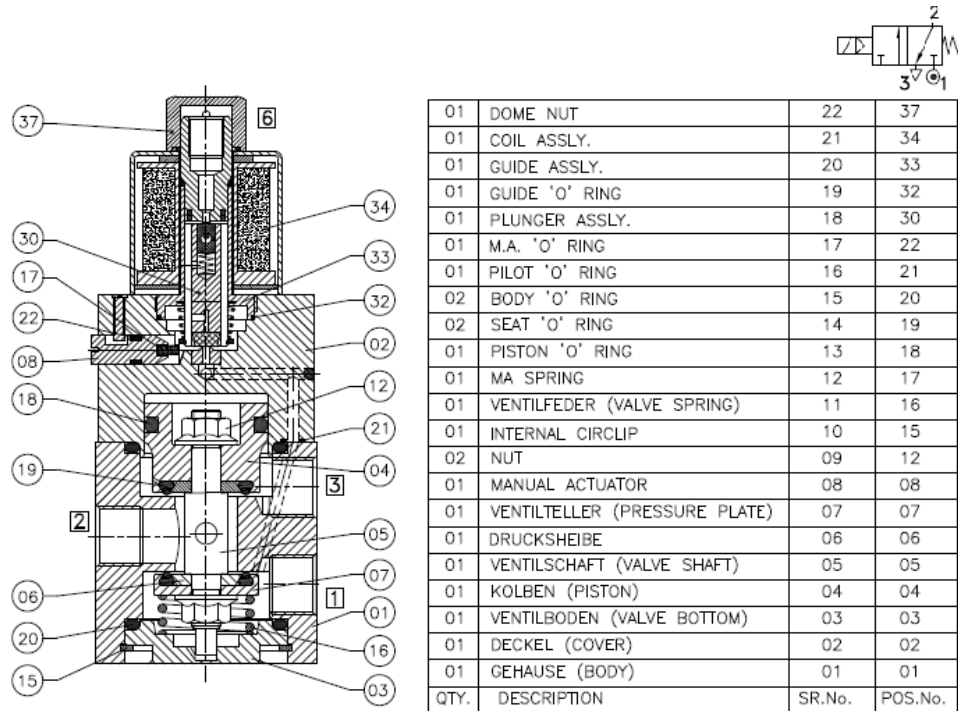
In de-energized condition of the solenoid, pressure applied at Inlet port # 1, a part of media drawn thru the pilot hole to below Duse hole, which is blocked by plunger assembly, In this state inlet port # 1 and Outlet port 2 are disconnected by ventilfeder(valve spring force). Outlet port 2 and Exhaust port # 3 are connected. Media cannot come out from the outlet.

In energized condition of the solenoid, plunger assembly moves up, thus pilot pressure come out from the duse hole and act on the piston assembly. Thus piston assembly moves downwards. In this state Inlet port # 1 and Outlet port # 2 are connected. Outlet port # 2 and Exhaust port 3 are disconnected. Media come out from the outlet.

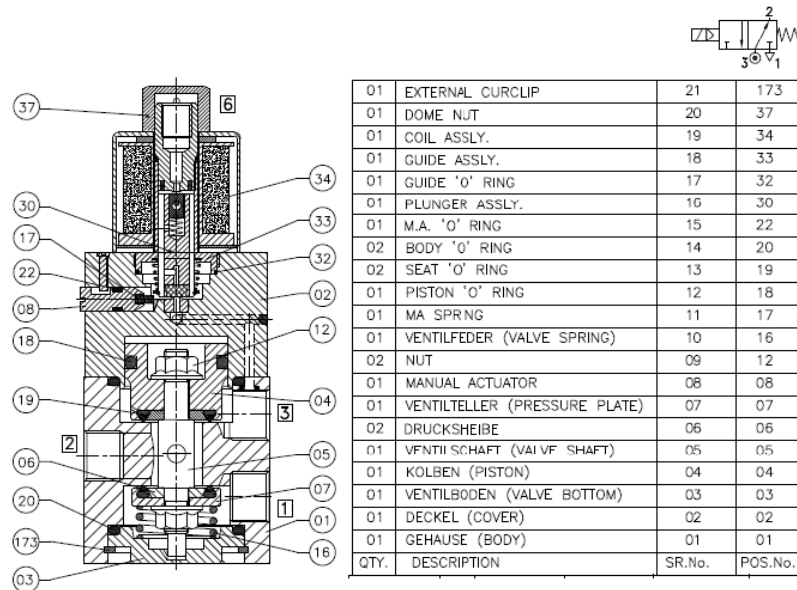
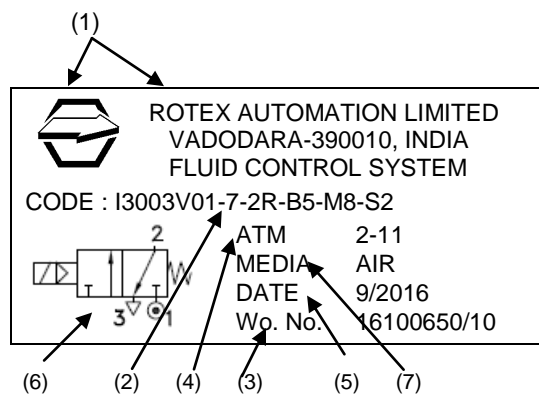
NORMALLY OPEN VALVE [I3005V01, I3005V01RP, P3003V01, P3007]

In de-energized condition of the solenoid, apply the pressure at Inlet port # 3, a part of media drawn thru the pilot hole to below Duse hole, which is blocked by plunger assembly, In this state inlet port # 3 and Outlet port 2 are connected. Outlet port 2 and Exhaust port # 1 are disconnected. Media come out from the outlet.

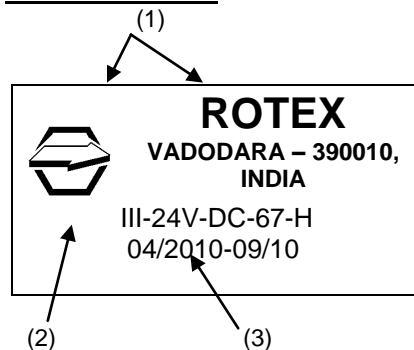
In energized condition of the solenoid, plunger assembly moves up thus pilot pressure come out from the duse hole and act on the piston assembly. Thus piston assembly moves downwards. In this state exhaust port # 1 and Outlet port # 2 are connected. Outlet port # 2 and Inlet port 3 are disconnected. Media come cannot out from the outlet.



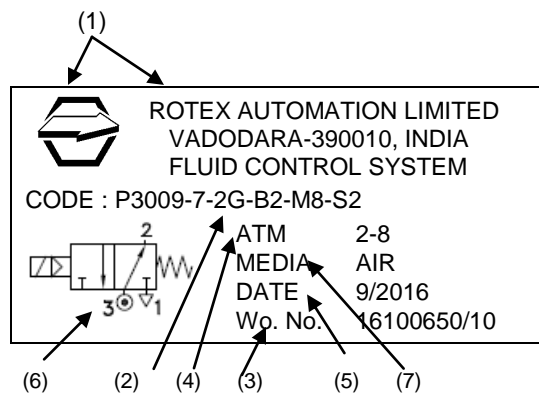
I3003V01, I3003V01RP, P3001V01, P3007

**I3005V01, I3005V01RP, P3003, P3009****IDENTIFICATION ON THE SOLENOID VALVE****a) NORMALLY CLOSE VALVE [I3003V01, I3003V01RP, P3001V01, P3007]**

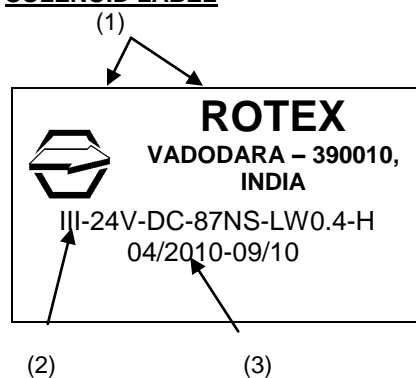
- (1) Logo + Name & address of the Manufacturer
 (2) Valve Type / Code
 I3003V01 = Valve Model
 Suffix = Nil
 7 = Orifice Ø
 2R = Port Connection
 B5 = Body Material
 M8 = Manual Override
 S2 = Seal Material
 (3) Work Order reference / Sr. No. of the Valve
 (4) Operating Pressure
 (5) Month & Year of manufacture
 (6) Valve Symbol
 (7) Media

SOLENOID LABEL

- (1) Logo + Name of the Manufacturer
 (2) Solenoid Type
 III = Solenoid Size III
 24V = Solenoid Voltage
 DC = Voltage supply type
 67 = Solenoid Construction (IS Solenoid)
 H = Solenoid Class H Insulation
 (3) Plan No. & Manufacturing Month / Year

b) NORMALLY OPEN VALVE [I3005V01, I3005V01RP, P3003V01, P3009]

- (1) Logo + Name & address of the Manufacturer
- (2) Valve Type / Code
P3009 = Valve Model
Suffix = Nil
7 = Orifice Ø (mm)
2G = Port Connection
B2 = Body Material
M8 = Manual Override
S2 = Seal Material
- (3) Work Order reference / Sr. No. of the Valve
- (4) Operating Pressure
- (5) Month & Year of manufacture
- (6) Valve Symbol
- (7) Media

SOLENOID LABEL

- (1) Logo + Name of the Manufacturer
- (2) Solenoid Type
III = Solenoid Size III
24V = Solenoid Voltage
DC = Solenoid voltage supply type
87NS = Solenoid Construction
LW0.4 = Power consumption
H = Solenoid Class H Insulation
- (3) Plan No. & Manufacturing Month / Year

c) PORT IDENTIFICATION

A solenoid Valve with NPT (F) threading is normally marked “N” near the port and with Metric threads are marked “M”. For ports with BSP threads, there is no marking.

d) Voltage, current & other details are additionally laser marked on the solenoid.

NOTE : The product without label is out of warranty and risk.

(B) MOUNTING/INSTALLATION PROCEDURE:**1. ENSURE THAT:**

- While storing, keep the valve in cool, dry, dust free area.
- On receipt of the valve, in case if the same is to be removed from the sealed plastic bag for inspection/testing, put them back with dust plugs on its ports and sealing the plastic bag as soon as the inspection/testing is over.
- The valve should be removed from its card board and/or plastic bag just before the installation.
- Flush lines before installing the valve.
- To avoid pressure drop and to achieve optimum parameters, Pipe / Tube / Fitting from the source of pressure to the valve and to the connected equipment should have ID which is \geq NW (Orifice) of the valve.
- To avoid pressure drop, if more than one valve is being operated simultaneously from a common header, then minimum ID of the header can be calculated as under.

$$ID \text{ Header} = \sqrt{(NW^2 \times n)}$$

$$n = \text{Number of Valves operating at a time and which are connected to a common header,}$$

$$NW = \text{Orifice of the Valve.}$$
- Incorporate filter in the line to avoid hard particles entering into the valve.
- The valve should be installed for the media for which it is intended for. This is to avoid the malfunction of seals and the valve. In case if you intend to use valve for media other than the one specified on that valve, check compatibility of media to Body Seal material and grease. Consult **ROTEX** in case if any doubt.
- Do not try to drill any additional holes or machine, modify any of the valve components.



- j) In case if the valve is used for dangerous fluid gas/liquid then, the user is hereby advised to maintain during operation and maintenance of the valve below LEL or above UEL to avoid explosion due to internal spark as the valves have not been assessed for the same.
- k) Inlet pressure does not exceed rated pressure.
- l) Hemp-Filaments, 'Jute' or even Teflon-Ribbons are normally not required, as the port connections of ROTEX Valve is accurately machined.
- m) To avoid over lap of the Teflon ribbon or cuts generated while tightening, getting carried away into the valve. Do not cover first two thread pitches with Teflon tape or sealant.



- n) **For Solenoid Valve to be installed in European Union, check the applicability for ATEX, PED Directives. Refer separate Instruction Manual for ATEX approved Solenoid Valve.**



- 2. Provide Dust Cap on the exhaust port or ensure that the valve is mounted such a way that dust particles / rain water / process fluid do not enter into the valve through exhaust port of the valve. You can connect bend pipe of ID \geq NW of the valve so that the exhaust port is not directly (straight) open into the atmosphere.

- 3. The process fluid etc.: do not fall on the valve body.

- 4. In case if the surrounding atmosphere has traces or some other substance other than Air, check its compatibility with the Body material of the valve, Solenoid enclosure & other exposed parts.



- 5. In case if the valve is installed in potentially Hazardous area, check for the temperature class of the Solenoid to avoid explosion due to heated Solenoid / other components.



- 6. Provide fuse of proper rating to avoid excess current passing through the Solenoid and thereby avoiding over heating.



- 7. It is not likely however, the user is advised to protect the valve against lightening as the same is not assessed.

- 8. Check internal components (wetted) parts for its compatibility with fluid passing through the valve.



- 9. **It is recommended to replace all the Rubber Parts including Plunger Assembly (Repair Kit – Code 99) in case if the valve is to be installed and put in service after 2 years from the date of manufacture.**

ELECTRICAL

- 1. Verify name plate affixed on the Solenoid.

- 2. Connect the power supply according to the voltage rating of the Solenoid

- 3. Ensure that the cover is properly tightened wherever applicable.



- 4. Install valve in such a way that the rain water / other process fluid dripping along the cable does not fall on the SOV and has no possibility to run along the cable and enter into the Terminal area.

- 5. Fill in the space between cable and gland entry with a proper sealant. If necessary, you may mount the valve upside down or in any other direction.

- 6. Ensure that the Solenoid enclosure meets process and local authority requirement.

- 7. The Solenoids is provided with test leads. Remove them before final installation.



- 8. Check proper connections for the polarity of solenoid.



- 9. **Refer separate manual for construction of the Solenoid and for specific instructions related to Solenoid.**

- 10. Ensure that the solenoid construction is selected properly meeting the environment in which the valve is supposed to be installed e.g. use of Ex ia solenoid for valve to be installed in hazardous location or Weatherproof Solenoid having IP 67 for outdoor installation.

MANUAL OVERRIDE OPERATION

(A) PUSH & TURN TYPE (M6)

When the solenoid is de energized (Photo-1) inlet and & outlet port will be in normal position, applying rated pressure, the valve can be operated either pressing the Manual Override, when the same is released, the valve returns back to the normal position. The valve can also be locked in energized (Photo-2) position by pushing the Manual Override and rotating clockwise. To avoid Manual Override returning back to normal condition, ensure that the same is turned above 90°. The valve can be brought to normal condition by turning Manual Override anti clockwise.

(B) PUSH TYPE (M8)

When the solenoid is de energized, inlet and outlet ports connection and rated pressure applied, the valve can be brought to energized position by pressing Manual Override. The valve remains in this position till Manual Override is pressed. As soon as the same is released, the valve returns back to the normal position.

TESTING OF THE VALVE AT THE TEST BENCH



- Check at least once in 3 years or following your routine maintenance schedule.

- a) Apply rated pressure at inlet port of the valve.

- b) Plug outlet port.

- c) Check operation of the valve and leakage at the exhaust ports and pilot vent at the rated and minimum working pressure by applying 75% to 120% rated voltage.

- d) While keeping the solenoid de-energized, check operation and leakage from exhaust and pilot vent ports of the valve at the rated and minimum working pressure by operating Manual Override.

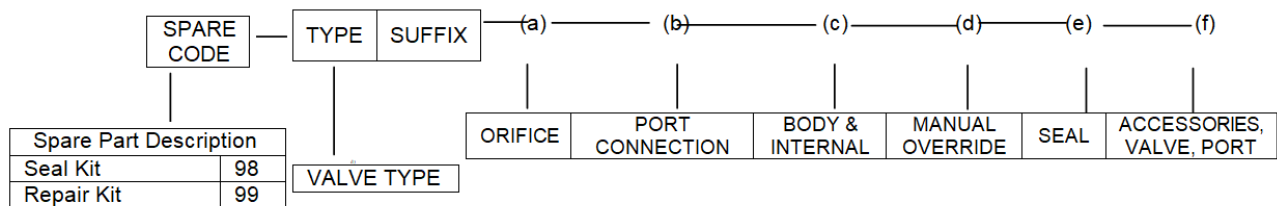
- ⚠ e) Without connecting air supply to the valve, operate Manual Override. Energize and De-Energized Solenoid to check for the plunger movement (normally movement should not be there) which can be checked by click sound. After operating Manual Override if plunger movement is found, reduce length of the manual override by 0.3mm from its taper end. Continue this till click sound stops.
- f) Check the insulation resistance of the Solenoid by applying 500V DC at terminals and the solenoid housing. It should be more than 100 Mega Ohms.

RECOMMENDED SPARES FOR P3001V01, P3001RP, P003V01, P3009

Code	Description	Components
98	Seal kit	O ring set + Plunger Assembly
34	Solenoid kit	Solenoid, Gasket & Nut
99	Repair kit	All components except body, Cover and Solenoid

RECOMMENDED SPARES FOR I3003V01, I3003V01RP, I3005V01, I3005V01RP

Code	Description	Components
P98	Seal kit	O ring set
34	Solenoid kit	Solenoid, Gasket & Nut
99	Repair kit	All components except body and Solenoid

SPARE ORDERING CODE

[* For I3003V01, I3003V01RP, I3005V01& I3005V01RP valve, use P98 code for seal kit which include O ring set only]

RECOMMENDED MAINTENANCE

- Replacement of Complete Set of O Ring ... Once in 5 years or 2 million operations.
- Solenoid O Ring (Part 35), Guide O Ring (Part 32),
- MA O Ring (Part 22), Body O Ring (Part 20),
- Seat O Ring (Part 19), Piston O Ring (Part 18)
- Replacement of Plunger Assembly ... Once in 5 years or 2 million operations
- Replacement of the Solenoid ... As and when required.
- Check of Insulation Resistance, Resistance of the Solenoid... Once in a year (should be ≥ 100 MOhms @ 500V DC.

PREVENTIVE**MAINTENANCE – GENERAL INSTRUCTION**

- ⚠ The Solenoid Valve must be removed from the site and has to be maintained under safe conditions.
- ⚠ All air and electrical connections must be switched off before removing valve from the line.
- ⚠ It is recommended to replace complete set of O Ring even if one of the O Ring is damaged. This is to ensure trouble free operation of the valve and will avoid its premature failure.
- Using Grease other than Silicon base Molykote M55 will lead to premature failure of O Rings of the **ROTEX** Solenoid valve.
- ⚠ If necessary to clean the components, **do not use Kerosene, Diesel, Petrol to clean valve as this damages the O Rings and other rubber material. Instead use light Detergent Soap Solution.**
- Ensure that the components are free from dust, dirt, lint and metal burrs.
- Twisting of O Ring should be avoided. Ensure that the twist is removed before fitting matching part.
- While closing the matching part, the matching part should be pushed in a straight line. Turning motion should be avoided.
- Pinching of O Ring at the groove corner at the time of closing gland should be avoided.
- User is requested to use safe practice for maintenance.
- It is important to place the dismantled Valve Parts on a clean paper or cloth in same sequence in which you have dismantled them.
- Ensure to keep all the components of the valve separately to avoid their mixing up. The component appears to be same may have small differences which will cause malfunction if interchanged.
- In case of difficulty you should contact the Agent, Distributor or **ROTEX** directly.
- Using **ROTEX** genuine spares will **Guarantee** you trouble free operation and will avoid premature failure.

(A) TO REPLACE SOLENOID

- 1) Open dome nut (Part 37) and pull out solenoid (Part 34).
- 2) Replace new solenoid ensuring the construction, voltage and current meets the requirements.
- 3) Tighten the dome nut (Part 37) applying torque of 0.2 kgm to 0.35 kgm to avoid over tightening of the solenoid.
- 4) Measure and record resistance of the Solenoid.

(B) TO REPLACE GUIDE ASSEMBLY (CORE TUBE) (Part 33) / PLUNGER (Part 30)

- 1) Open dome nut (Part 37) and pull out solenoid (Part 34).
- 2) Open Guide Assembly (Core Tube) (Part 33) using proper tool.
- 3) Remove Plunger Assembly (Part 30).
- 4) Replace the necessary defective parts ensuring that the plunger assembly spring and the retaining ring is as per Photo - 3 or as per Photo – 4 & 5.
- 5) The Plunger as per Photo - 4 & 5 is interchangeable and can be fitted in the existing Guide Assembly (Core Tube).
- 6) Fix Guide Assembly (Core Tube) using correct tool.
- 7) Fix the solenoid and dome nut as per Point-4 of procedure A.
- 8) Even though it is not recommended, in case if required, the Guide Assembly (Core Tube) (Part 33) can be opened using plier or other similar tool ensuring that the same does not damage anything or component and the plier is tighten above weld joint (weld joint should be at the centre of plier jaw width).

(C) REPLACEMENT OF MANUAL OVERRIDE (PART 8)

- 1) Remove Grub Hex Socket Set Screw (Part 115) and pull out Manual Override (Part 8).
- 2) Replace new Manual Override applying light layer of Silicon Grease Molykot M55 and tighten the grub screw fully till the Manual Override stops traveling in and out.
- 3) Open the Grub Hex Socket Set Screw slightly (1/4 turn) and check the smooth movement of the grub screw.



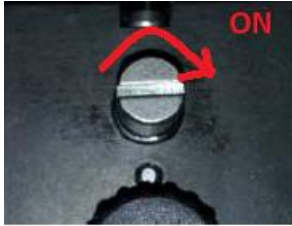
- 4) Without connecting air supply to the valve, operate Manual Override. Energize and De-energize Solenoid to check for the plunger movement (normally movement should not be there) which can be checked by click sound.
After operating Manual Override if plunger movement is found, reduce length of the manual override by 0.3mm from its taper end. Continue this till click sound stops.

(D) REPLACEMENT OF O RINGS

- 1) Remove solenoid if necessary as per Procedure (A).
- 2) Remove Deckel (Cover) (Part 2) by opening four screws.
- 3) Remove Ventilboden (Valve Bottom) (Part 3) using internal circlip plier.
- 4) Remove Ventilsfeder (Valve Spring) (Part 16).
- 5) Open Nut (Part 12).
- 6) Insert rod in hole provide in Ventilschaft (Valve Shaft) (Part 5) to remove Nut (Part 12).
- 7) Remove all the O Rings [Piston O Ring (Part 18 – 1 No.), Seat O Ring (Part 19-2 Nos.), Body O Ring (Part 20 – 2 Nos.)].
- 8) Clean components.
- 9) Fix new O Rings applying light layer of Molykot M55 grease.
- 10) Ensure that the O Rings and other rubber parts are compatible to the media passing through the valve.
- 11) Reassemble the valve.
- 12) Check operation and leakage of the valve.
- 13) Contact ROTEX in case of any difficulty.

STORING, CLEANING AND MOUNTING OF ELASTOMERS: SYNTHETIC RUBBER PRODUCTS

- Store Plunger, O Ring Set in sealed polyethylene bag, kept in cool, dry, dust free area and avoid direct contact with all light sources emitting ultra violet rays, or contact with fumes, solvents, fuels, lubricants, chemicals, acids, disinfectants.
- Follow Maintenance General Instruction & specific procedures to replace O Ring set as listed above.



Manual Override in "OFF"
TWIST TOWARDS RIGHT
FOR "ON"
Photo – 1



Manual Override in "ON"
TWIST TOWARDS LEFT
FOR "OFF"
Photo – 2



Plunger with fixed conical
& cylindrical seal (Old
Plunger)
Photo – 3



Spring Dia Flat
Face(Small) this side
Photo – 4

Contact :

ROTEX AUTOMATION LIMITED

987/11, GIDC, MAKARPURA, VADODARA – 390010, INDIA

Tel. : +91 265 2638136, 2638746, 2638795 Fax : +91 265 2638130

E-mail : rotexbrd@rotexindia.com

Website : www.rotexindia.com