



TT-210

Head mount smart temperature transmitter



General Features:

- Universal input, support RTD:Pt100, Cu50, Cu100 Thermocouple:K,J,E,T,S,R,B,N, PT1000 and WRe needs to be custom made
- 2 wires 4-20mA output
- Input configurable via PC software and android smart phone
- . Built-in cold junction compensation
- Can be installed in Form B connection box
- . High accuracy, 0.1% for RTD, 0.2% for TC
- USB cable for configuration purpose can draw power from PC directly separate 24VDC power source is no need
- · Surge protection, reverse connection protection

The configuration can be done via software from PC or from android smart phone

Ordering Information

TT-210 (General version, input/output non-isolation)
You can configure the input and range using PC or android smart phone

General Specifications


Item No	TT-210	
Sensor type	PT100,Cu50,Cu100,K,J,E,T,S,R, B,N,PT1000 and WRe needs to be custom made	
Cold end junction compensate range	-40°C~ + 80°C	
Compensate accuracy	±1°C	
Output	4-20mA	
Load resistance	RL ≤ (Ue-12)/0.021	
Over range alarm value	IH=20.8mA, IL=20.8mA	
Input break output current value	21mA	
Power supply	12-35VDC	
Accuracy(ambient 20°C)	0.1% F.S for RTD, 0.2% F.S for TC	
Temperature drift	0.01% F.S/°C	
Response time	1ms to 90% of maximum output	
Input/output isolation strength	Non-isolation	
Input/output impedence	Non-isolation	
EMC standard	IEC 61326-1	
Working temperature	-40°C~ + 80°C	
Mounting screw	M4*2	

Input signal and range


Sensor type	Specific sensor type	Measuring range	Minimum measuring range
RTD	Pt100	-200.0~850.0°C	10°C
	Cu50	-50.0~-150.0°C	10°C
	Cu100	-50.0~150.0°C	10°C
тс	В	400~1800°C	500°C
	E	-100~1000°C	50°C
	J	-100~1200°C	50°C
	K	-180~1372°C	50°C
	N	-180~1300°C	50°C
	B	-50~-1760°C	500°C
	S	-50~-1760°C	500°C
	T	-200~400°C	50°C
Need to be custom made	Wre3-25	0~2315°C	500°C
	WreS-26	0~2310°C	500°C
	Pt1000	-200.0~850.0°C	10°C

Dimension

Technical Specifications

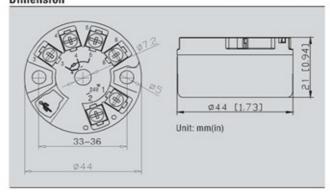

Installation guide

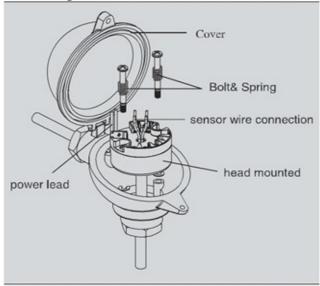








TT-210

Head mount smart temperature transmitter

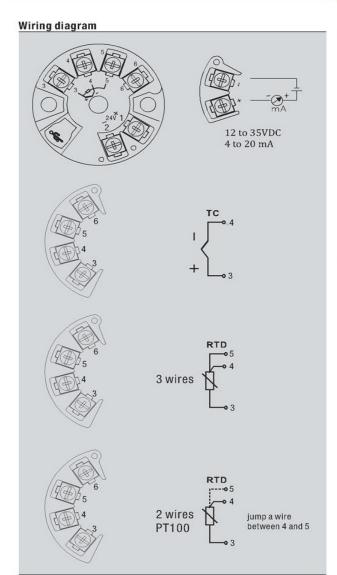



PC configuration software interface



START

STOP

Android OS system configuration software interface

Configuration guidelines

The configuration can be done via PC and android smart phone.





ELTEC CABLES & INSTRUMENTS

16, Bhaktinagar Station Plot, Rajkot-360 002. INDIA.

Tel.: +91 281 2480400 URL: www.thermocouplewire.co.in

E-mail: eltecin@gmail.com I sales@thermocouplewire.co.in