



BNC CONNECTOR



BNC MALE CRIMP FOR RG58



**BNC FEMALE 4HOLE
CLAMP FOR RG58**



**BNC MALE CRIMP RIGHT
ANGLE FOR RG58**



**BNC MALE CLAMP
FOR LMR400**



**BNC FEMALE 4HOLE
CLAMP FOR RG316**



**BNC FEMALE BULK
HEAD CONNECTOR**



**BNC FEMALE BULKHEAD
CRIMP FOR RG316**



**BNC FEMALE 4HOLE
CRIMP FOR RG316**



**BNC MALE CRIMP FOR
RG316/RG174 - IMPORTED**



BNC MALE FOR RG405/RG086



BNC MALE FOR RG141/RG402



**BNC Female for
RG316 Cable crimp**

BNC CONNECTOR



**BNC Female for
RG58 Cable Crimp**



BNC Female Flange



**BNC Female Bulkhead
for RG58 Cable Crimp**



BNC Female Bulkhead




**BNC Female Flange
for RG316 Cable Crimp**



BNC Male for RG405 cable



**BNC Male R/A Connector
for RG316/RG174 Cable**

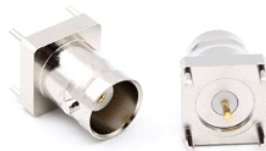

BNC Female PCB Mount



**BNC Male Connector
for RG58 Cable Crimp**



**BNC Female Connector for
RG316 Cable**



**BNC 75ohm Female for
RG59 cable RF Connector**



**BNC Female Connector for
RG223/RG142 Cable**

BNC CONNECTOR



**BNC female bulkhead
RF Connector wire wrap type**



**BNC Female Bulkhead
Connector for Terminal**



**BNC Female Bulkhead
Connector for Terminal**



BNC Male for RG316 cable crimp



**BNC Male for
RG58 Cable Clamp**



**BNC Male 75ohm Connector for
RG179 Cable Skywindow**



**BNC Male For
RG316 Cable Sky window**



**BNC Male Connector for
RG58 Cable Clamp**



**BNC Male For RG58 Cable crimp
Stainless Steel RF Connector**



**BNC Male For
LMR400 Cable, Crimp**



**BNC Female
Bulkhead RG316 Cable**



**BNC Female Bulkhead
for RG316 Cable Crimp**

BNC CONNECTOR



**BNC Male for
RG316 Cable, Crimp**



BNC Male for RG401 Cable



**BNC Male for
RG11 Cable, Clamp**



**RF Connector BNC
Female PCB Mount**



**RF Connector BNC Female
Bulkhead for RG316 Cable, Crimp**



**RF Connector BNC Female Bulkhead
for .086/RG405 Cable**



**Stainless steel
BNC Male for CXN3507 Cable**



BNC Male for RG6 Crimp



**BNC Male Right Angle
for 5D-FB Cable Crimp**



BNC Female Flange Mount



**BNC Female bulkhead
for RG316 Cable**




**BNC Female Bulkhead Connector
for Solder Pot Terminal**

BNC CONNECTOR



**BNC Female Bulkhead
Connector for Terminal**

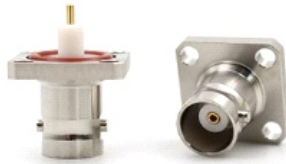

BNC Female Flange Terminal



**75 Ohm BNC Male
for RG59 Cable, Crimp**



**RF Connector BNC
Female Bulkhead**



**RF Connector BNC Female
Bulkhead for RG316 Cable Crimp**



BNCT male connector



**BNC Female for
RG316 Cable crimp**



**BNC Female for
RG316 Cable crimp**



**BNC 75 Ohm Male Connector for
RG316 Cable Sky window**



**BNC Female Flange
Connector Terminal**



**BNC Female Bulkhead
Connector for RG58 Cable**



**BNC Male Connector
for RG316 Cable Clamp**

BNC CONNECTOR



**BNC Female Connector
For 141 Cable**



**BNC Female Flange
Connector For .141 Cable**



**BNC Female Connector for
.086/RG405 Cable**



**BNC male Connector
For 141 Cable**



**BNC Female Bulkhead Connector
for LMR141 Cable**



**BNC Female
Flange Terminal**



**BNC Female
Flange for .086/RG405 cable**



**BNC Female Bulkhead Connector
for .086/RG405 Cable**



**BNC male to 1032 female
RF Coaxial Adapter**



**BNC double female
bulkhead**



**BNC Female to BNC Female
4 Holes Flange RF Coaxial**



**BNC 75ohm Female to
Female Flange Adapter**

BNC ADAPTER



BNC Female to Female Flange



75Ω BNC double female bulkhead



BNC Female to male to Female



BNC Female to Female to Female Adapter



N Male (PLUG) to BNC Female (JACK) RF Adapter



N female to BNC male adapter



N Male to BNC Male



SHV Female to BNC Female RF Adapter



SHV Male to BNC Male RF Adapter



SHV Male to BNC Female RF Adapter



SHV Female to BNC Female RF coaxial Adapter



BNC male to SMA male RF Coaxial Adapter

BNC ADAPTER



BNC male to SMA female RF Adapter



BNC Male to SMA Male Adapter



BNC Male to SMA Female Adapter



**BNC Female to
SMA Male Adapter**



**BNC Female to SMA
Female Adapter**



**BNC Female to SMA
Female Flange Adapter**



BNC Female to SMA Female



**BNC Female to
SMA Female FLange mount**



**BNC Male to
SMA Female Adapter**



TRB Female to BNC Male



TRB Male to BNC Female



TRB Male to BNC Male

BNC ADAPTER



TRB Female to BNC Female



UHF Male to BNC Male



UHF Female to BNC Male



UHF Male to BNC Female



UHF Female to BNC Female





DIPESHWARI ENGINEERING WORKS

📍 A-12,13, Reena Shoping Center, Parshwnath Township,
Krishnanagar, New Naroda, Ahmedabad-382345.

☎ 8980 3131 30, 9638 99 5555

✉ info@dipeshwari.com

🌐 www.dipeshwari.com

