

Configuring CTR for APM-240

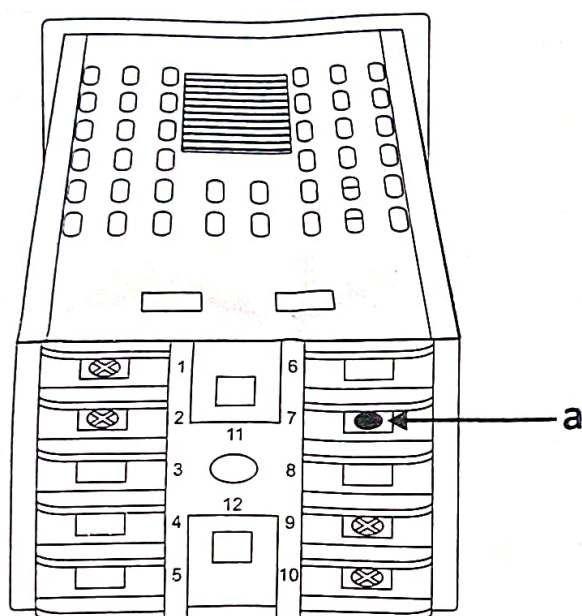


Figure 1

Programming Scheme

- APM-240: via rear key (Tact Switch) as shown in figure 1, point a.

S. No.	Function	Method	Display Indication
1	To enter Programming Mode	Press switch for 1 sec	CTR
2	CT Primary	With every press of the key.	5, 10, 20, 30, 40, 50, 60, 70, 75, 90, 100, 150, 200, 250, 300, 400, 500, 600, 700, 750, 800, 900, 1000, 2000, 3000, 4000, 5000, 6000, 7000, 8000, 9000
3	To Exit Programming Mode	Select required CTR & wait for 6 seconds to display enter in main mode	After Exiting from Programming mode, Display will show Current readings as per CTR value selected.