



OPERATING INSTRUCTIONS

COP-Plus

(ANSI CODE 51, 50, 51N, 51G, 50N, 50G, 50BF, 79, 74TC)



MRM **PROCOM** Pvt Ltd

An ISO-9001-2008 certified organization

Works: Plot No. 20-21, Sector 59, Phase –II, Faridabad, Haryana -121004

Ph: 0129-4700400 (10 lines) Email: pankajgupta@mrmpocom.com,

Web: www.mrmpocom.com

- 1. Introduction**
- 2. Protection, Supervision Salient features**
- 3. Out Put Contact**
- 4. Protection**
- 5. User Interface**
- 6. Setting Procedure / Menus**
- 7. Setting Procedure Parameter Mode**
- 8. External Alarm Contact**
- 9. Reset – Auto / Manual**
- 10. Model Selection Chart**
- 11. Flow Chart**
- 12. Communication**
- 13. Connection Diagram**
- 14. Technical Specification**
- 15. Dimensional Details**

Numerical Feeder Protection Relay COP-Plus

1.0	Introduction
------------	---------------------

- The COP Plus Series of Feeder Protection Relays are Designed Using Numerical Technology (Discrete Fast Fourier Transformation.) Reliable & Accurate Tripping is Ensured by Deploying Digital Technique Using DSP. High Sampling Rate of 2000 Sample/Sec Ensures Actual Reproduction of Waveform.
- User Friendly HMI Eases Configuration & Operating Procedure of Relay
- User Programmable Digital Output Provides Flexibility in Selecting Alarm Contact.
- In Addition to Default USB Part one Optional RS-485 Port is also Provided.

2.0	Protection, Supervision Salient Features
------------	-------------------------------------------------

- 128x64 Pixel Graphical /display
- Event Recording
- Fault Date Recording
- RTC Stamp on Fault & Event
- Three/Five Digital Input
- Site Selectable 1A/5A CT Secondary Current
- Wide Auxiliary Supply(20 To 300 VDC/50-300VAC)
- Display in Primary/Secondary Values
- Wide Setting Range With Fine Setting Steps
- Front USB Port
- RS-485 communication Port with MODBUS protocol
- Self Supervision

3.0	Output Contact
------------	-----------------------

Cop Plus had upto seven NO Contact. One is reserved for tripping function. Three are programmable for alarm function.

- | | |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ul style="list-style-type: none"> • Trip (NO/NC Contact) • Alarm 1 (NO Contact) • Alarm 2 (NO Contact) • Relay ON Contact (NO Contact) | <ul style="list-style-type: none"> • Alarm 3 (NO Contact) • Alarm 4 (NO Contact) • Charging Contact (NO/NC Contact) |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|

4.0	Protection
------------	-------------------

- Over Current Protection
- Short Port Current Protection
- Earth Fault Protection
- High set Earth Fault Protection
- Ground Fault Protection
- High Ground Fault Protection
- Trip Current Supervision
- Circuit Breaker Failure Protection
- Multiple Shot Auto Re-closer
- Lock Out
- Tripping Characteristics
 - Definite Time - DEFT
 - Inverse Time - Extremely Inverse
 - Inverse Time - Very Inverse
 - Inverse Time - Normal Inverse 0.6

Numerical Feeder Protection Relay COP-Plus

Inverse Time - Normal Inverse 1.3

Inverse Time - Normal Inverse 3.0

- Selective Earth/ground Fault Blocking In Case of single phase voltage supplied on all three phases.
- All the protections can be programmed to be individually or collectively blocked by external input
- Remote Trip Input
- Remote Reset input

5.0

User Interface

5.1 LCD Display






Graphical back-lit LCD Display is provided for parameter and setting display and for easy viewing of measurement, setting, fault and event records, date and time, error message. Back-lit is automatically turned ON when any tripping occurs on particular equipment.

5.2 Touch Keys





The function of relay is controlled by the following keys. Back Switch, Next Switch, Up Switch, Down Switch, Enter key, Reset Key and Test Key which are provided on the front plate.

Front plate with diagram and keys marked will be good

Cop plus has a very sophisticated HMI build into it. These keys play different role under different function of HMI

Switch Symbol	Switch Function	Description
	Back Switch and Next Switch	To enter Edit/View Mode the Back Switch and Next Switch are pressed together.
	Back Switch	This key has dual function. Left Arrow Key are used to scroll the menu as well as to decrement the value of parameters in setting mode. The Left Arrow Key are used to go backward both when doing the settings and while viewing the settings.
	Next Switch	This key has dual function. Right Arrow Key are used to scroll the menu as well as to increment the value of parameters in setting mode. The Right Arrow key are used to go forward both when doing the settings and while viewing the settings.
	Up Switch	The Up Arrow Key is used to increment the value of parameters in setting mode.
	Down switch	The Down Arrow Key is used to increment the value of parameters in setting mode.

Numerical Feeder Protection Relay COP-Plus

	Enter Switch	Pressing enter key will take the HMI in the sub menu of displayed Menu.
	Test Switch	Test Key is for testing the unit, if this function is enabled in the settings.
	Reset Switch	Reset key is used to reset the fault annunciations. RESET key is used to discard while doing the settings and abort to main menu.
	BC Switch	CB key is used to close the Circuit Breaker (Available in Auto re-closure model only)

Note: At the time of setting if changes are not carried within 20s then the display will reset itself and return to the main menu.

Front Panel and Control :

S.no	LED's	Description
1	I >	This led indicates an over current.
2	I >>	This led indicates a short circuit.
3	Ie >	This led indicates an Earth Fault at lower set.
4	Ie >>	This led indicates an Earth Fault at higher set.
5	CBFP	This led indicates a circuit breaker fault.
6	Lock Out	This led indicated that the Auto Re-closure attempts were not able to clear the faults.
7	TCS	This led indicates a Trip Circuit Failure.
8	Trip	This led indicates a fault occurrence.

LCD Display :

Back-lit LCD display 128 * 64 by 2 lines is provided for Viewing and Editing the parameter, Viewing and Editing the annunciation, Fault records, Event records, Date and Time and also for password changing.

6.0

Setting Procedure / Menus

COP Plus has provision to program the operating parameters. It is user / site configurable. User can view all parameters, fault history, events, adjust clock, reset password and also edit the parameter. Following is the sequential procedure to edit. View all the menus and submenus.


Press “Back Switch  & Next Switch  simultaneously.”

The LCD shall display, “Edit Parameter”




Numerical Feeder Protection Relay COP-Plus



A. Edit Parameter

Edit Parameter is password protected.


To enter 'Edit Parameter' mode, press enter key .

The LCD shall display, "Enter Password".

Enter Password. The default password is 123. Press enter key . For any change in value, press Up switch  and Down switch .


For next parameter, press **Next** Switch . We can also view the previous parameter, by pressing **Back** Switch .

B. Edit Annunciations


After Edit Parameter, press **Next** Switch .

The LCD shall display "Edit Annunciation".

Edit Annunciation is password protected.


Edit Annunciation can modify / viewed by pressing enter key .

C. Edit Block Function


After Edit Annunciation, press **Next** Switch .

The LCD shall display "Edit Block Function".


Edit Block Function is password protected.

Edit Annunciation can modify / viewed by pressing enter key .


D. View Parameter

After Edit Block Function, press **Next** Switch .


The LCD shall display "View Parameter".

View Parameter can be viewed by pressing enter key .


E. View Annunciation

After View Parameter, press **Next** Switch .


The LCD shall display "View Annunciation".

View Annunciation can be viewed by pressing enter key .

F. Display History

After View Annunciation, press **Next** Switch .


The LCD shall display "Display History".

Trip record / history can be viewed by pressing enter key .


COP-Plus keep a record of last 32 tripping with date and time stamp.

Tripping records are updated on first in first out basis.

F. Display Event

After Display History, press **Next** Switch .

The LCD shall display "Display Event".

Trip record / history can be viewed by pressing enter key .

COP-Plus keep a record of last 32 events with date and time stamp.


Event records are updated on first in first out basis.

F. Adjust Clock


Numerical Feeder Protection Relay COP-Plus

After Display Event, press **Next** Switch


The LCD shall display “Adjust Clock”.


Time and Date can be modified by pressing enter key 

F. Reset Password

After Adjust Clock, press **Next** Switch 

The LCD shall display “Reset Password”.

Password can be modified by pressing enter key 


COP-Plus will request for the present password, after feeding correct password change password will be requested and the password will be replaced by new password on pressing Up Switch 


Default Display:


After Power ON or when the RESET is done, it will show the following display :




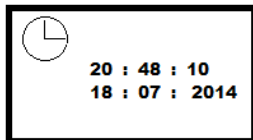
This window will flash momentarily showing the following display. Then the control will go automatically to next window which is shown below :

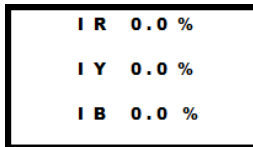

This will display the current in all phases in terms of percentage if the display set to display value in secondary. After 10 sec the display will automatically scroll to next display window or press Enter key  can be used to manually switch to next window.

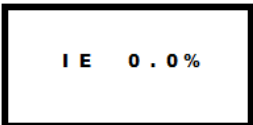


This will display the earth fault current in terms of percentage. By pressing enter key , the display will show as :



This will the display the time and date.

6.1 Parameter Setting

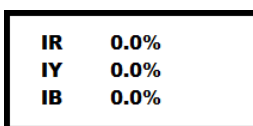


This is default window showing the actual Primary Load Current as per CT ratio.

Press the Back Switch  and the Next Switch  simultaneously, the display will show as follows:



Numerical Feeder Protection Relay COP-Plus


Edit Parameter

In this mode, we can edit the different parameter setting as per our convenience.
To enter this mode, press enter key 

Enter Password

0

Enter password by using Up Switch  and the Down Switch 

Press the enter key , the display will show as follows:

If the password is wrong, the display will be :



Wrong Password


After displaying this, it will return to the main menu.

If the password is correct, the display will be :

I > in I / In



0.50


By using Up Switch  and the Down Switch , the desired value can be set.
The value can be set from 0.10 to 9.99 in steps of 0.01 I/In.

Press the Next Switch  to view the next parameter, display will show as follows:

I > Def Time



0.30


By using Up Switch  and the Down Switch , the desired value can be set.
The value can be set from 0.10 to 150.0 in steps of 0.01 sec.

Press the Next Switch  to view the next parameter, display will show as follows:

I > Time Multipl



0.30

By using Up Switch  and the Down Switch , the desired value can be set.
The value can be set from 0.10 to 2.50 in steps of 0.01.

Press the Next Switch  to view the next parameter, display will show as follows:


I > Characterist

DEFT



By using Up Switch  and the Down Switch , the desired characteristic can be set. It can be set as DEFT / Extremely Inv / Very Inverse / Normal Inv 0.6 / Normal Inv 1.3 / Normal Inv 3.0




Numerical Feeder Protection Relay COP-Plus



Press the Next Switch  to view the next parameter, display will show as follows:


I >> in I / In
4.0

By using Up Switch  and the Down Switch , the desired value can be set.
The value can be set from 0.2 to 30.0 in steps of 0.1 I/In.



Press the Next Switch  to view the next parameter, display will show as follows:


I >> Def Time
0.03

By using Up Switch  and the Down Switch , the desired value can be set.
The value can be set from 0.03 to 20.0 in steps of 0.01 sec.



Press the Next Switch  to view the next parameter, display will show as follows:


EF Measure Type
51G EXT Earth CT

By using Up Switch  and the Down Switch , the desired type can be set.
The type can be set as either 51G EXT Earth CT or 51N Internal Cal.



Press the Next Switch  to view the next parameter, display will show as follows:


Ie > in I / In
0.20

By using Up Switch  and the Down Switch , the desired value can be set.
The value can be set from 0.10 to 10.0 in steps of 0.01 I/In.



Press the Next Switch  to view the next parameter, display will show as follows:


Ie > Def Time
0.30

By using Up Switch  and the Down Switch , the desired value can be set.
The value can be set from 0.03 to 150.0 in steps of 0.01 sec.

Press the Next Switch  to view the next parameter, display will show as follows:

Ie > Time Multip
0.30

By using Up Switch  and the Down Switch , the desired value can be set.
The value can be set from 0.1 to 1.50 in steps of 0.01


Press the Next Switch  to view the next parameter, display will show as follows:

Ie > Characterist
Normal Inv 3.0



By using Up Switch  and the Down Switch , the desired characteristic

Numerical Feeder Protection Relay COP-Plus

can be set. It can be set from DEFT / Extremely Inv / Very Inverse / Normal
Inv 0.6 / Normal Inverse 1.3 / Normal Inv 3.0



Press the Next Switch  to view the next parameter, display will show as follows:


Ie>> in I/In
0.5

By using Up Switch  and the Down Switch , the desired value can be set. The value can be set from 0.2 to 10.0 in steps of 0.1 I/In.



Press the Next Switch  to view the next parameter, display will show as follows:


Ie >> Def Time
0.03

By using Up Switch  and the Down Switch , the desired value can be set. The value can be set from 0.02 to 20.0 in steps of 0.01 sec.



Press the Next Switch  to view the next parameter, display will show as follows:


CT Ratio
1

By using Up Switch  and the Down Switch , the desired value can be set. The value can be set from 1 to 9999 in steps of 1.



Press the Next Switch  to view the next parameter, display will show as follows:


CT Secondary
5A

By using Up Switch  and the Down Switch , the desired value can be set. The value can be set either 5 Amp or 1 Amp.



Press the Next Switch  to view the next parameter, display will show as follows:


Trip Ckt Sup
Disabled

By using Up Switch  and the Down Switch , the desired type can be set. It can be set either as Disabled or Enabled.

Press the Next Switch  to view the next parameter, display will show as follows:

CB Failure Ann.
Disabled

By using Up Switch  and the Down Switch , the desired type can be set. It can be set either as Disabled or Enabled.



Press the Next Switch  to view the next parameter, display will show as follows:


CB F Delay
0.50

01.2015






Numerical Feeder Protection Relay COP-Plus

By using Up Switch  and the Down Switch , the desired value can be set.
The value can be set from 0.05 to 2.00 in steps of 0.01



Press the Next Switch  to view the next parameter, display will show as follows:


Single Phasing
Disabled

By using Up Switch  and the Down Switch , the desired type can be set. It can be set either as Disabled or Enabled.



Press the Next Switch  to view the next parameter, display will show as follows:


Test Function
Disabled

By using Up Switch  and the Down Switch , the desired type can be set. It can be set either as Disabled or Enabled.



Press the Next Switch  to view the next parameter, display will show as follows:

No. of AR Shots
0

By using Up Switch  and the Down Switch , the desired value can be set.
The value can be set from 1 to 4 in steps of 1



Press the Next Switch  to view the next parameter, display will show as follows:


AR Shot 1 DT
2.0

By using Up Switch  and the Down Switch , the desired value can be set.
The value can be set from 0.5 to 250 in steps of 0.1



Press the Next Switch  to view the next parameter, display will show as follows:


AR Shot 2 DT
2.0

By using Up Switch  and the Down Switch , the desired value can be set.
The value can be set from 0.5 to 250 in steps of 0.1

Press the Next Switch  to view the next parameter, display will show as follows:

AR Shot 3 DT
2.0



By using Up Switch  and the Down Switch , the desired value can be set. The value can be set from 0.5 to 250 in steps of 0.1


Press the Next Switch  to view the next parameter, display will show as follows:

Numerical Feeder Protection Relay COP-Plus

AR Shot 4 DT



2.0


By using Up Switch  and the Down Switch , the desired value can be set. The value can be set from 0.5 to 250 in steps of 0.1

Press the Next Switch  to view the next parameter, display will show as follows:

Reclaim Time



15


By using Up Switch  and the Down Switch , the desired value can be set. The value can be set from 10 to 500 in steps of 1.

Press the Next Switch  to view the next parameter, display will show as follows:

Close Pulse Time



1.0


By using Up Switch  and the Down Switch , the desired value can be set. The value can be set from 0.1 to 20.0 in steps of 0.1

Press the Next Switch  to view the next parameter, display will show as follows:

Reset Delay

0.5


By using Up Switch  and the Down Switch , the desired value can be set. The value can be set from 0.1 to 1.0 in steps of 0.1 sec.

Press the Next Switch  to view the next parameter, display will show as follows:

Disp Auto Scroll



Auto Scroll On


By using Up Switch  and the Down Switch , the desired type can be set. The type can be set either as Auto Scroll On or Auto Scroll Off.

Press the Next Switch  to view the next parameter, display will show as follows:

Dis in Pri/ Sec

Secondary

By using Up Switch  and the Down Switch , the desired type can be set. The type can be set either as Primary / Secondary.



Press the Next Switch  to view the next parameter, display will show as follows:


Trip Reset

Auto



.2015


Numerical Feeder Protection Relay COP-Plus

By using Up Switch  and the Down Switch , the desired type can be set.
The type can be set either as Auto / Manual.



Press the Next Switch  to view the next parameter, display will show as follows:


Device Id
1

By using Up Switch  and the Down Switch , the desired value can be set. The value can be set from 1 to 247.



Press the Next Switch  to view the next parameter, display will show as follows:


Baud Rate
9600

By using Up Switch  and the Down Switch , the desired value can be set. The value can be set as 1200/2400/4800/9600/19200.



Press the Next Switch  to view the next parameter, display will show as follows:

Parity
None

By using Up Switch  and the Down Switch , the desired parity can be set. It can be set as Even, Odd, None.

Press the Next Switch  to view the next parameter, display will show as follows:

No of Stop Bits
1


By using Up Switch  and the Down Switch , the desired value can be set. The value can be set as 1 or 2.

Press the Next Switch  to go to the main menu.



6.2 To edit annunciation parameter:

After Edit Parameter, press Next Switch , the display will show as follows:


Edit Annunciation

In this mode, we can edit the different parameter setting as per our convenience. To enter this mode, press enter key . The display will show as:

Enter Password
0

Enter password by using Up Switch  and Down Switch 

Numerical Feeder Protection Relay COP-Plus

Press the enter key , the display will show as follows:



If the password is wrong, the display will be :

Wrong Password

After displaying this, it will return to the main menu.



If the password is correct, the display will be :


Announce I >
On A1 Contact

By using Up Switch  and the Down Switch , the desired contact can be set. It can be set as A1 / A2 / A3 / A4 / Not Announced



Press the Next Switch  to view the next parameter, display will show as follows:


Announce I >>
On A1 Contact

By using Up Switch  and the Down Switch , the desired contact can be set. It can be set as A1 / A2 / A3 / A4 / Not Announced.

Press the Next Switch  to view the next parameter, display will show as follows:


Announce Ie >
On A1 Contact

By using Up Switch  and the Down Switch , the desired contact can be set. It can be set as A1 / A2 / A3 / A4 / Not Announced.

Press the Next Switch  to view the next parameter, display will show as follows:



Announce Ie >>
On A1 Contact


By using Up Switch  and the Down Switch , the desired contact can be set. It can be set as A1 / A2 / A3 / A4 / Not Announced.

Press the Next Switch  to view the next parameter, display will show as follows:

Press the Next Switch  to view the next parameter, display will show as follows:

Ann CB Failure
On A2 Contact

By using Up Switch  and the Down Switch , the desired contact can be set. It can be set as A1 / A2 / A3 / A4 / Not Announced.

Press the Next Switch  to view the next parameter, display will show as follows:

Ann Lock Out
On A3 Contact

2015



Numerical Feeder Protection Relay COP-Plus

By using Up Switch and the Down Switch, the desired contact can be set. It can be set as A1 / A2 / A3 / A4 / Not Announced.



Press the Next Switch to view the next parameter, display will show as follows:

Ann Trip Ckt
On A4 Contact

By using Up Switch and the Down Switch, the desired contact can be set. It can be set as A1 / A2 / A3 / A4 / Not Announced.

Press the Next Switch to go the main menu.

6.3 To Edit Block Function:

After Edit Annuciation, press Next Switch, the display will show as follows:

Edit
Block Function

In this mode, we can block the different current area as per our convenience. To enter this mode, press enter key.

Enter Password
0

Enter password by using Up Switch and Down Switch

Press the enter key, the display will show as follows:

If the password is wrong, the display will be :

Wrong Password

After displaying this, it will return to the main menu.

If the password is correct, the display will be :

Block I >
Disabled


By using Up Switch and the Down Switch, the desired over current can be blocked. It can be set as enabled or disabled.


Press the Next Switch to view the next parameter, display will show as follows:

Block I >>
Disabled


By using Up Switch and the Down Switch, the desired short circuit current can be blocked. It can be set as enabled or disabled.


Numerical Feeder Protection Relay COP-Plus

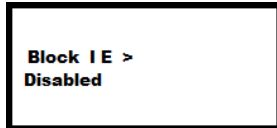

Press the Next Switch  to view the next parameter, display will show as follows:



By using Up Switch  and the Down Switch , the desired Earth fault lower set values can be blocked. It can be set as enabled or disabled.

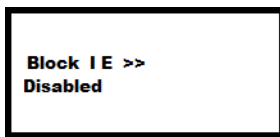Press the Next Switch  to view the next parameter, display will show as follows:




By using Up Switch  and the Down Switch , the desired Earth fault lower set values can be blocked. It can be set as enabled or disabled.

Press the Next Switch  to go to the main menu.


6.5 To View Parameter


After Edit Block Function, press Next Switch  to View Parameter. In this mode, we can only view the readings of the parameter, no change in value is allowed here.


6.6 To View Annunciation

After View Parameter, press Next Switch  to View Annunciation. In this mode, we can only view the readings of the annunciation, no change in value is allowed here.


6.7 To View Display History:

After Edit Block Function, press Next Switch , the display will show as follows:

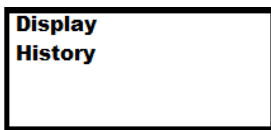


To view the record of last faults occurred, press enter key .


The Faults which occurred previously are displayed. Some of the Examples are:

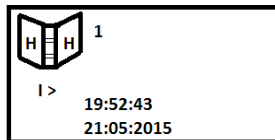

Whenever the fault occurred, an fault is generated and will be shown in display history block with respective time and date. This is the random time and date for the example purpose.

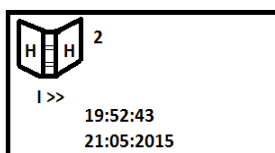

Whenever the fault occurred, an fault is generated and will be shown in display history block with respective time and date. This is the random time and date for the example purpose.

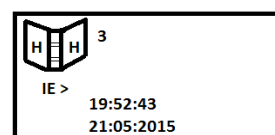


2015


Numerical Feeder Protection Relay COP-Plus

Whenever the fault occurred, an fault is generated and will be shown in display history block with respective time and date. This is the random time and date


6.6 To View Display Event:

After Display Hitory, press Next Switch ,the display will show as follows:

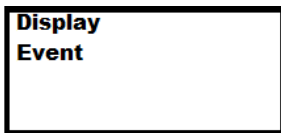


To view the list of events occurred, press enter key , the display will show as:


The events which occurred previously are displayed. Some of the Examples are:

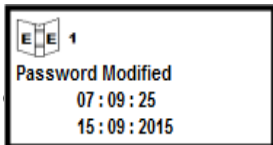

Whenever the password is changed, an event is generated and will be shown in block with respective time and date. This is the random time and date for the example purpose.

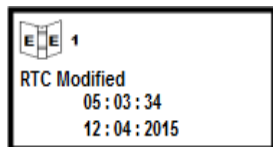


Whenever the time and date is changed, an event is generated and will be shown in display event block with respective time and date.This is the random time and date for the example purpose.

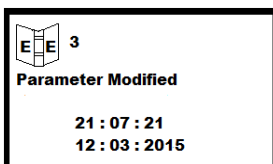


Whenever the value of parameter is changed, an event is generated and will be shown in display event block with respective time and date. This is the random time and date for the example purpose.


6.7 To View Adjust Clock:

After Display Event, press Next Switch ,the display will show as follows:

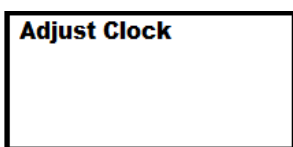


To change the time and date, press enter key . The display will show as:

Numerical Feeder Protection Relay COP-Plus

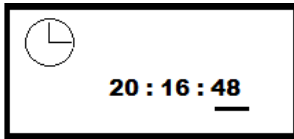


This is the random time and date for the example purpose. The values can be change by using up arrow key ⬆ and down arrow key ⬇. To switch from seconds to minutes or minutes to hours, press enter ⬇ key, the cursor will move according to that and once time is changed, the date page is displayed as :

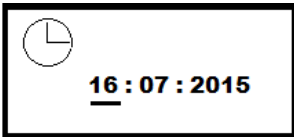


This is the random time and date for the example purpose. The values can be change by using up arrow key ⬆ and down arrow key ⬇. To switch from seconds to minutes or minutes to hours, press enter ⬇ key, the cursor will move according to that.

6.8 To Reset Password


After Adjust Clock, press Next Switch ⬆, the display will show as follows:

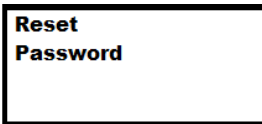

To Reset the password, press enter key ⬇, display will show as :

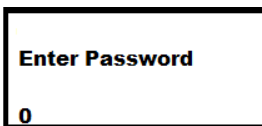

Enter the current password by using the up arrow key ⬆ and down arrow key ⬇. The display will show as :

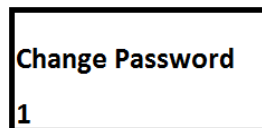

Enter the new password which you want to set by using the up arrow key ⬆ and down arrow key ⬇, press enter key ⬇, the display will show as :



Press up arrow key ⬆ to update the password else press down arrow key ⬇ to escape from the page. The display will show as :



It means password is updated.

Numerical Feeder Protection Relay COP-Plus

7.0 Setting Procedure Parameter Mode

S. .No	Display	Explanation of parameter	Factory setting	Setting Range	Setting step
1	I > in I/In	Desired over current value in % of the rated current	0.50	0.1-10.00 I/In	0.01I/In
2	I > Def Time	Definite time delay in seconds, will be valid only when definite time characteristic is selected	0.30 Sec	0.10 – 150 Sec	0.01 Sec
3	I > Time Multiplier	Inverse time multiplier, will be valid only when Inverse time characteristic is selected	0.3	0.10- 2.50	0.01
4	I > Characteristic	Time delay characteristic for Over current	DEFT	DEFT, Extreme inverse, Very Inverse, Normal Inverse 0.6, Normal inverse 1.3, Normal Inverse 3.0	
5	I > > in I/In	Desired short circuit values in % of the rated current.	4.0	0.2-30.0 I/In	0.1 I/In
6	I >> Def Time	Definite time delay in seconds, will be valid only when definite time characteristic is selected	0.03	0.03 – 20 Sec	0.01 Sec
* 7	EF measure type	Earth fault measurement method	51G ext earth CT	51G ext earth CT 51N internal cal.	
8	I e> in I/In	Desired Earth fault value in % of the rated current	0.20	0.10-10.0 I/In	0.01 I/In
9	I e> Def Time	Definite time delay in seconds, will be valid only when definite time characteristic is selected	0.30 Sec	0.03 – 150 Sec	0.01 Sec
10	I e> Time Multiplier	Inverse time multiplier, will be valid only when Inverse time characteristic is selected	0.3	0.1- 1.50	0.01
11	I e> Characteristic	Time delay characteristic for Earth fault current	normal inverse 3.0	DEFT, Extreme Inverse, Very Inverse, Normal Inverse 0.6, Normal inverse 1.3, Normal Inverse 3.0	
12	I e> > in I/In	Desired earth fault high set value in % of the rated current	0.5	0.2-10.0 I/In	0.1 I/In
13	I e>> Def Time	Time delay setting for earth fault high set	0.03	0.02 – 20 Sec	0.01 Sec
14	CT Ratio	Ratio of current transformer, Rated	1	1-9999	1

Numerical Feeder Protection Relay COP-Plus

		CT Primary current / Rated CT Secondary current			
15	CT- Secondary	Rated CT secondary current	5A	5A, 1A	
16	Trip Ckt Sup.	Trip Circuit supervision	Disabled	Enabled/disabled	
17	CB Failure Ann	Circuit Breaker Failure Protection	Disabled	Enabled/disabled	
18	CB F Delay	Delay time of CB	0.50	0.05-2.00	0.01
19	Single Phasing	Single Phasing Enable/Disable	Disabled	Enabled/disabled	
20	Test Function	Test Function Enable/Disable	Disabled	Enabled/disabled	
* 21	No. of AR Shots	No. of short for Auto reclosure	0	1-4	1
* 22	AR Shot 1 DT	Dead Time of AR short 1	2.0	0.5-250	0.1
* 23	AR Shot 2 DT	Dead Time of AR short 2	2.0	0.5-250	0.1
* 24	AR Shot 3 DT	Dead Time of AR short 3	2.0	0.5-250	0.1
* 25	AR Shot 4 DT	Dead Time of AR short 4	2.0	0.5-250	0.1
* 26	Reclaim Time	Time of Reclaim	15	10-500	1
* 27	Close Pulse Time	Time of Close Pulse	1.0	0.1-20.0	0.1
28	Reset Delay	Delay time for resetting the trip contact, after fault clearance.	0.5	0.1- 1.0Sec	0.1 Sec.
29	Disp AutoScroll	Measurement display auto scroll or manual scroll selection	Auto Scroll On	Auto Scroll On / Auto Scroll off	
30	Dis I in Pri/Sec	Selection of Current display in primary values or secondary values	Secondary	Primary/Secondary	
31	Trip Reset	Reset type for tripped LED indication	Auto	Auto / Manual	
* 32	Device ID	Device Identification Number	5	1-247	1
* 33	Baud Rate	Communication Baud Rate	9600	1200, 2400, 4800, 9600, 9200	
* 34	Parity	Parity Bit	None	Even, Odd, None	
* 35	No. of Stop Bits	No of stop bit	1	1-2	1

* Available only in model with auto-reclosure

8.0 External Alarm Contact

Alarm Contact 1,2, 3 & 4 can be programmed / activated on different protection functions

Protection Function	Protection Symbol	Activated Alarm, default setting	Remark
Announce I >	I >	1	Alarm 1 activated on I >
Announce I >>	I >>	1	Alarm 1 activated on I >>
Announce I E>	Ie >	1	Alarm 1 activated on Ie >
Announce IE >>	Ie >>	1	Alarm 1 activated on Ie >>
AnnCB Failure	CBFP	2	Alarm 2 activated on CB
Ann Lock Out	LR	3	Alarm 3 activated on Lock out
Ann Trip Ckt.	TCS	4	Alarm 4 activated on trip circuit

9.0 Reset – Auto / Manual

User can programme COP-Plus either as auto reset or manual reset relay.

Numerical Feeder Protection Relay COP-Plus


- Auto Reset : The trip contact & Indication will reset automatically after clearance of fault and expiry of reset delay.
- Manual Reset : The trip contact will reset automatically after clearance of fault and expiry of reset delay. Indication will reset after pressing the reset button.

10.0 Model Selection Chart

PROTECTION	ANSI Code	COP+I	COP+IE	COP+IEG	COP+IK	COP+IEK	COP+IEGK
IDMT Over Current Protection	51	■	■	■	■	■	■
Short Circuit Protection	50	■	■	■	■	■	■
Earth Fault Protection (Seperate CT)	51N			■		■	■
Earth Fault Protection Calculated	51G		■	■			■
High Set Earth Fault Protection(Seperate CT)	50N			■		■	■
High Set Earth Fault Protection(Calculated)	50G		■	■			■
Circuit Breaker Failure Protection	50BF	■	■	■	■	■	■
Auto Reclosure(Optional)	79				■	■	■
Trip Circuit Protection(Optional)	74TC	■	■	■	■	■	■
Front USB Part		■	■	■	■	■	■
RS-485 Communication Port(Optional)		■	■	■	■	■	■
Digital Input(Optional)		3	3	3	5	5	5
Digital Output		6	6	6	7	7	7


Numerical Feeder Protection Relay COP-Plus

Flow Chart- To Edit Parameter & To Edit Annunciation

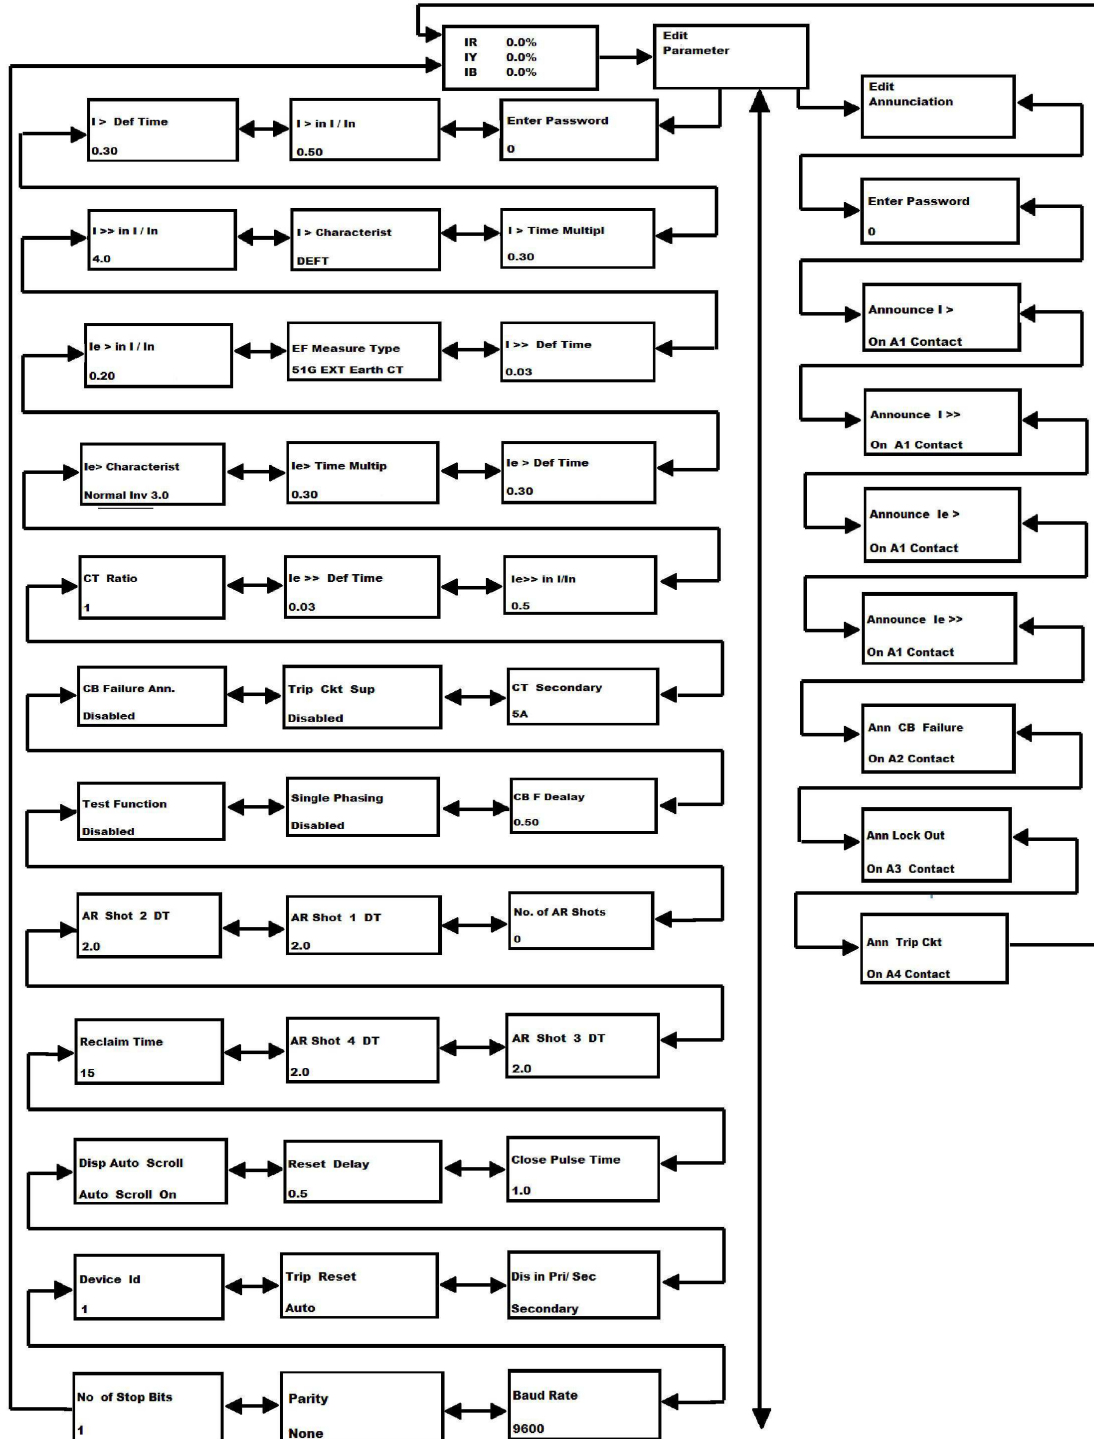

Numerical Feeder Protection Relay COP-Plus


Flow Chart- To View Parameter & To View Annunciation

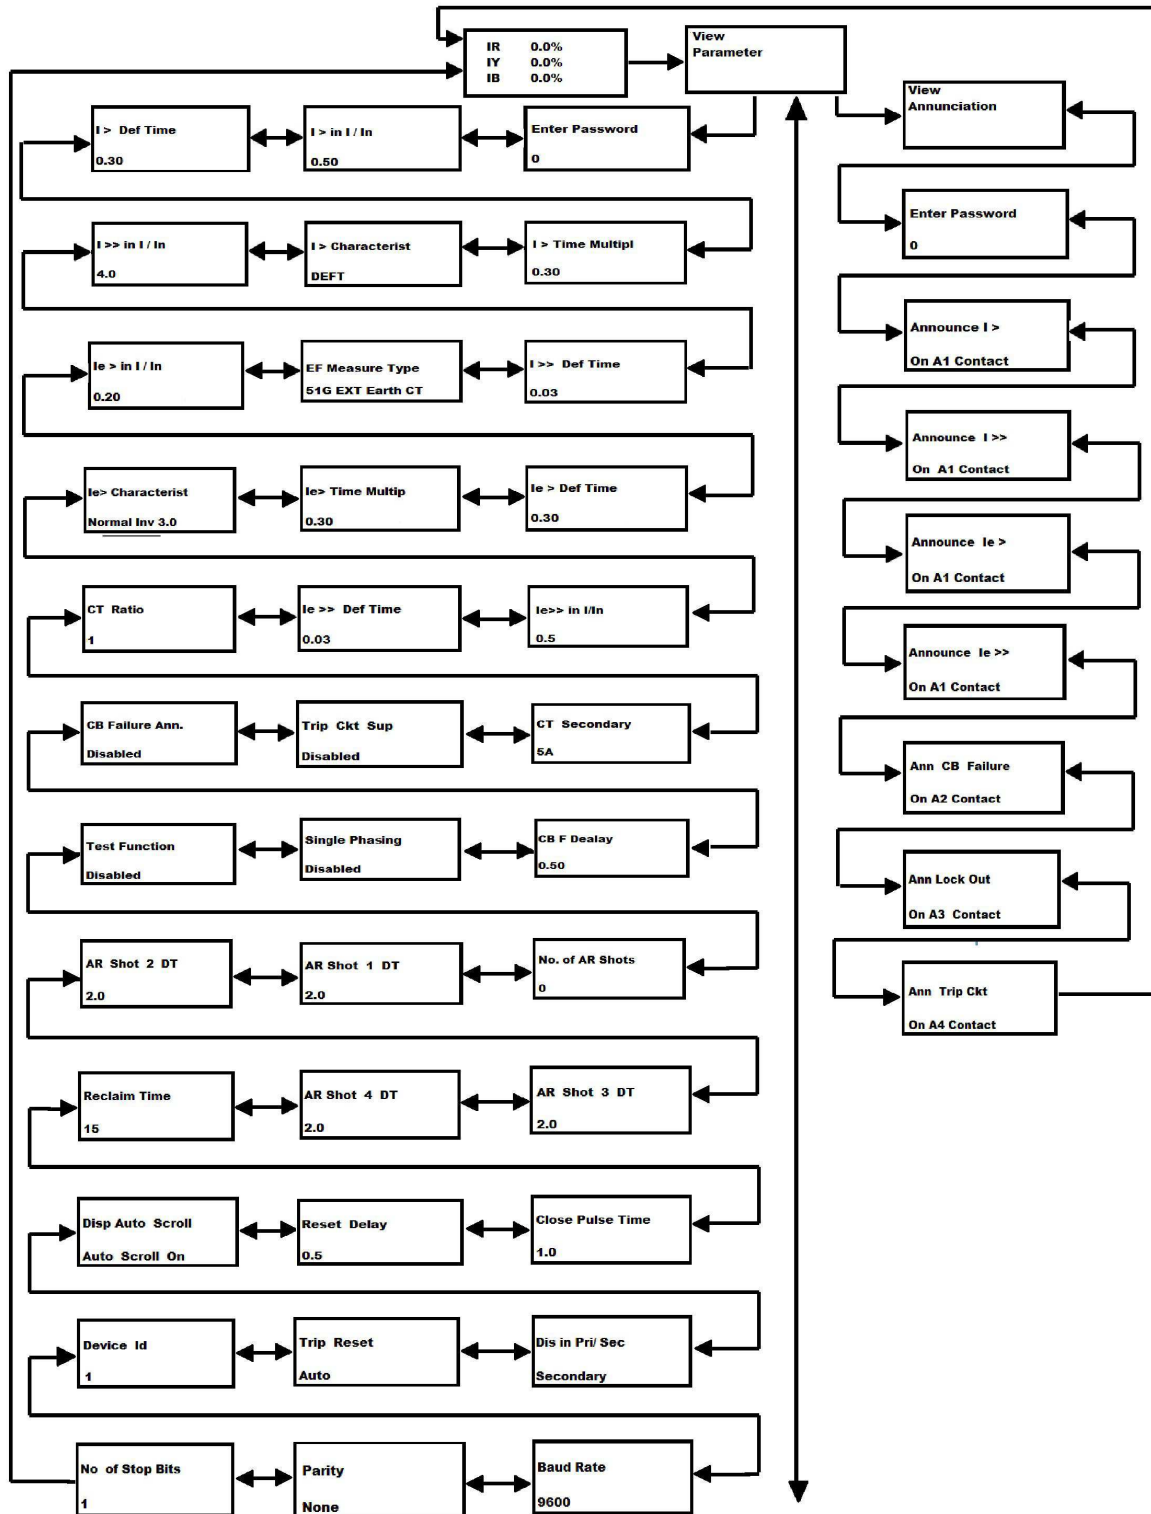


Numerical Feeder Protection Relay COP-Plus

Numerical Feeder Protection Relay COP-Plus

Flow Chart- To Display History

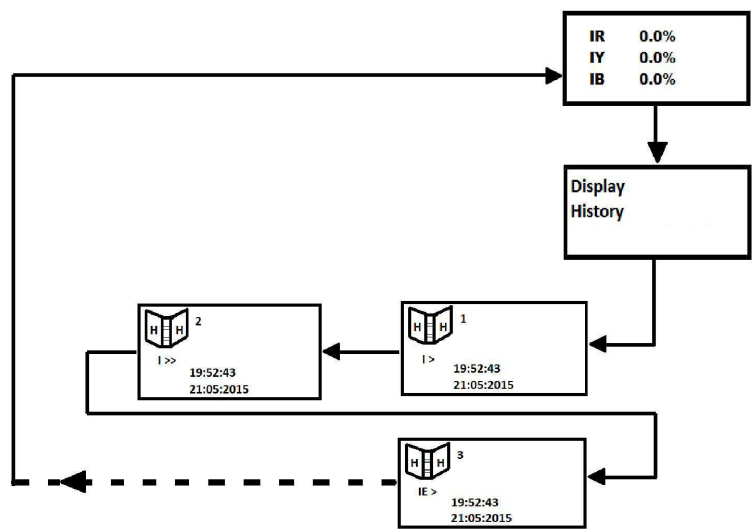


Flow Chart- To Display Event

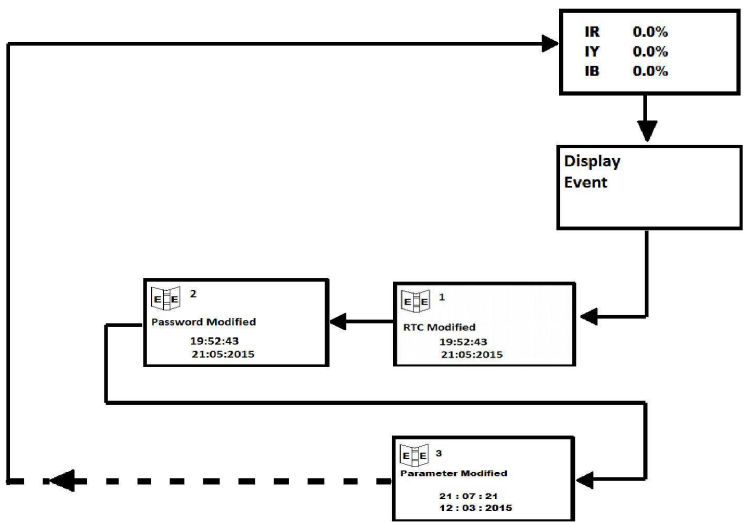


Note: Event 1 to Events 32 can be viewed respectively.

Numerical Feeder Protection Relay COP-Plus

Flow Chart- To Adjust Clock

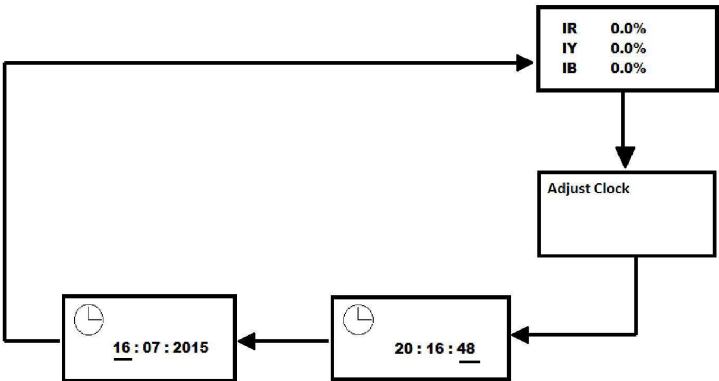

Flow Chart- To Reset Password

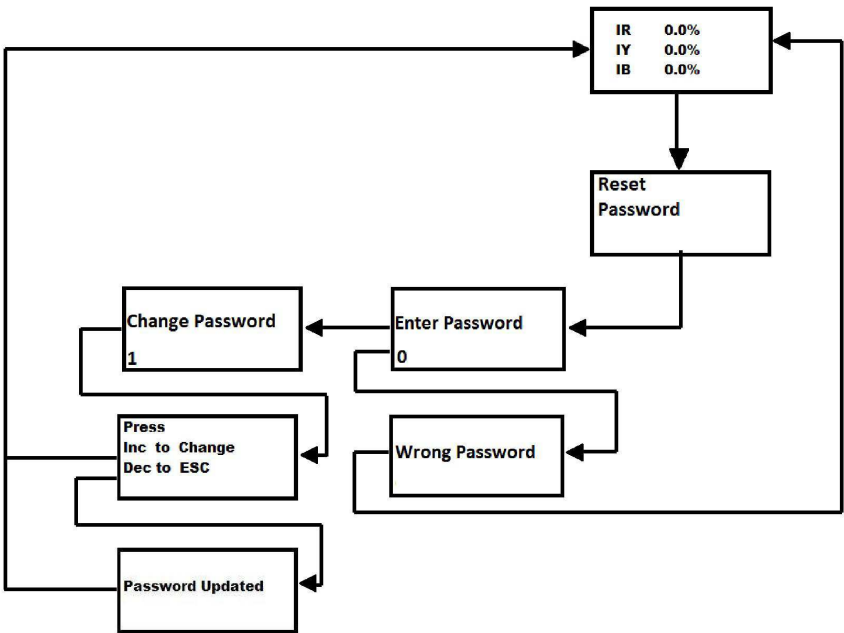

12.0

Communication


The word communication, as the word symbolise itself, it is basically the communication of COP with PC via RS-232 or RS-485 protocol to know the values of data stored or list of events or faults records. We can also send the values of parameter or reset it or send the default values as per the application made. The software provide us great facilities to view all the readings or to allow us to do changes very conveniently and it is very secure also.

Whenever the application is open, it requires login information for the security purpose. The display will be :



By entering the user name and password, click OK then the new screen is displayed as :

Numerical Feeder Protection Relay COP-Plus

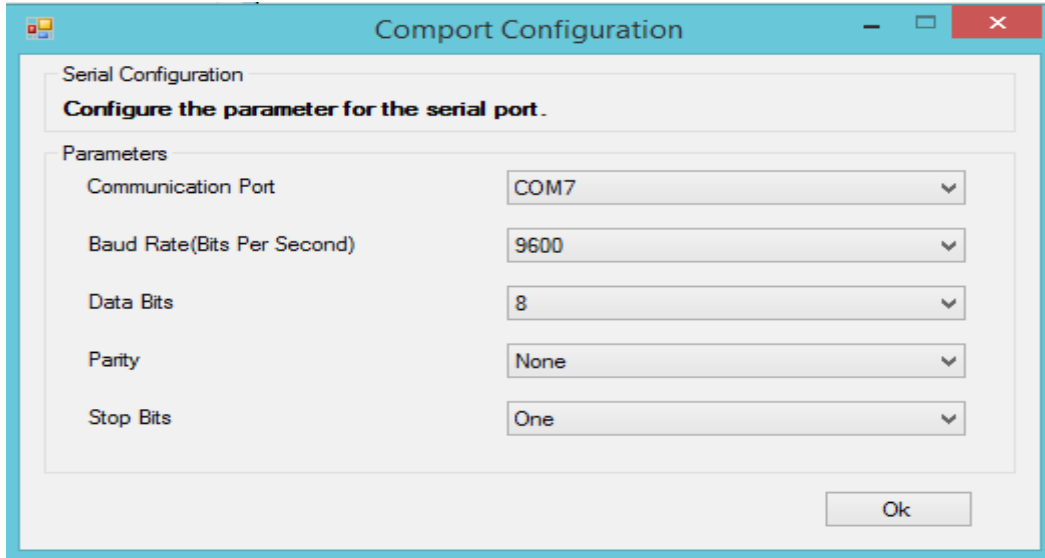

The image shows a Windows-style dialog box titled "Comport Configuration". It has a light blue title bar with standard minimize, maximize, and close buttons. The main content area is white and contains a section titled "Serial Configuration" with the instruction "Configure the parameter for the serial port." Below this, there is a "Parameters" section with five rows of configuration options, each with a label and a dropdown menu:

Parameter	Value
Communication Port	COM7
Baud Rate(Bits Per Second)	9600
Data Bits	8
Parity	None
Stop Bits	One

At the bottom right of the dialog box is an "Ok" button.

Whenever the device is connected to the PC, a comport is generated, check the device manager for the port name, enter the Communication Port ,Baud Rate, Data Bits, Parity, Stop Bits and then press OK.The display will show as:

Numerical Feeder Protection Relay COP-Plus



In this main form, we can select the model via select model, the display will be :

The screenshot shows a software window titled 'Cop' with a menu bar and several buttons: Send, Default, Save File, Read Bin File, Show Read Data, Reset Service, Clear, and Close. The 'Default' button is selected. Below the buttons is a section titled 'Cop Parameters' containing two columns of settings. Each setting consists of a label, a text input field, and a dropdown arrow.

Parameter	Value	Parameter	Value
I> in I/n	0.50	Input Connection	1 Phase-230V
I> Def Time	2.00	Power On UV Pick	UV monitor P-ON
I> Time Multipl	0.30	No of Cycles Avg	10
I> Characterist	DEFT	UF<	48.50
I>> in I/n	4.0	UF< Def Time	3.00
I>> Def Time	0.03	UF<<	48.00
EF Measure Type	51N internal Cal	UF<< Def Time	1.00
Ie> in I/n	0.20	OF<	51.00
Ie> Def Time	0.30	OF< Def Time	3.00
Ie> Time Multipl	0.30	OF<<	52.00
Ie> Characterist	Normal Inv 3.0	OF<< Def Time	1.00
Ie>> in I/n	0.5	Block Vol V/Vn	0.60
Ie>> Def Time	0.03	Reset Delay	0.5
CT Ratio	1	Disp Auto Scroll	Auto Scroll Off
CT Output Nomi.	5 AMP	Dis in Pri/Sec	Primary
Trip Ckt Sup	Disabled	Trip Reset	Auto
CB Failure Ann	Disabled	Device Id	1
CBF Delay	0.50	Baud Rate	9600
Single Phasing	Enabled	Paraity	ODD
Test Function	Disabled	No. of Stop Bits	2
No. ARR Shots	0	Announce I>	On A1 Contact
ARR Shot 1 DT	2.0	Announce I>>	On A1 Contact
ARR Shot 2 DT	2.0	Announce IE>	On A1 Contact
ARR Shot 3 DT	2.0	Announce IE>>	On A1 Contact
ARR Shot 4 DT	2.0	Announce V>	Not Announced
Reclaim Time	15	Announce V>>	Not Announced
...

By pressing the show read button, all the values stored in meter will be displayed.

The save button is used to save all the readings.

We can also change the values and press send button to pass the values into the COP.

By pressing Clear butrton, we can clear all the values in textboxes and drop down list.

By pressing Close button, the form will be closed.

In the main form, by clicking the event login menu strip the display will be:

Numerical Feeder Protection Relay COP-Plus



By clicking Fault Record, the faults generated will be displayed in the form as :

Fault			
Type	I>>	Iy	6
CT Ratio	400	Ib	3
PT Ratio		Ie	4
CT - 5A-1A	3A	Vr	200
Time	12:31:14	Vy	250
Date	12/04/2015	Vb	225
Ir	5	Frequency	40.06

Numerical Feeder Protection Relay COP-Plus

By clicking the Event record, the list of events generated will be displayed on the form as :

The screenshot shows a software window titled "Event History" with a standard Windows-style title bar (minimize, maximize, close buttons). Inside the window, there is a toolbar with four buttons: "Event Record" (highlighted with a blue border), "Save File", "Clear", and "Close". Below the toolbar, the window is divided into two main sections, labeled "1" and "2".

Section 1 contains a table with 16 rows, each representing an event. The first column lists "Event no. 1" through "Event No. 16". The second column contains text labels: "Pwd. Modified" for Event 1, "Para. Modified" for Event 2, and empty boxes for Events 3 through 16. The third and fourth columns contain date and time information. For Event 1, the date is "10-03-2015" and the time is "12:34:56". For Event 2, the date is "15-06-2015" and the time is "13:23:43". For Events 3 through 16, the date and time fields are empty, showing only the field structure (e.g., "--:--:--").

Section 2 contains a table with 16 rows, labeled "Event No. 17" through "Event No. 32". All fields in this section are empty, showing the field structure for each event record.

Section 1				Section 2			
Event no. 1	Pwd. Modified	10-03-2015	12:34:56	Event No. 17		--:--:--	--:--:--
Event No. 2	Para. Modified	15-06-2015	13:23:43	Event No. 18		--:--:--	--:--:--
Event No. 3		--:--:--	--:--:--	Event No. 19		--:--:--	--:--:--
Event No. 4		--:--:--	--:--:--	Event No. 20		--:--:--	--:--:--
Event No. 5		--:--:--	--:--:--	Event No. 21		--:--:--	--:--:--
Event No. 6		--:--:--	--:--:--	Event No. 22		--:--:--	--:--:--
Event No. 7		--:--:--	--:--:--	Event No. 23		--:--:--	--:--:--
Event No. 8		--:--:--	--:--:--	Event No. 24		--:--:--	--:--:--
Event No. 9		--:--:--	--:--:--	Event No. 25		--:--:--	--:--:--
Event No. 10		--:--:--	--:--:--	Event No. 26		--:--:--	--:--:--
Event No. 11		--:--:--	--:--:--	Event No. 27		--:--:--	--:--:--
Event No. 12		--:--:--	--:--:--	Event No. 28		--:--:--	--:--:--
Event No. 13		--:--:--	--:--:--	Event No. 29		--:--:--	--:--:--
Event No. 14		--:--:--	--:--:--	Event No. 30		--:--:--	--:--:--
Event No. 15		--:--:--	--:--:--	Event No. 31		--:--:--	--:--:--
Event No. 16		--:--:--	--:--:--	Event No. 32		--:--:--	--:--:--

Numerical Feeder Protection Relay COP-Plus


By clicking the read data, the values will be displayed on the form as :

Read Data			
Get Read Data Save File Clear Close			
Read Data			
Voltage LN R Phase	140	Current Y Phase	3.6A
Voltage LN Y Phase	150.5	Current B Phase	4.5A
Voltage LN B Phase	200.10	Current Neutral	3A
Voltage LL RY Phase	300	Frequency	50.5
Voltage LL YB Phase	210.16	PT Ratio	
Voltage LL BR Phase	240	CT Ratio	200
Current R Phase	4A		

Numerical Feeder Protection Relay COP-Plus

13.0 Connection Diagram / Terminal arrangement

Terminal Connection :

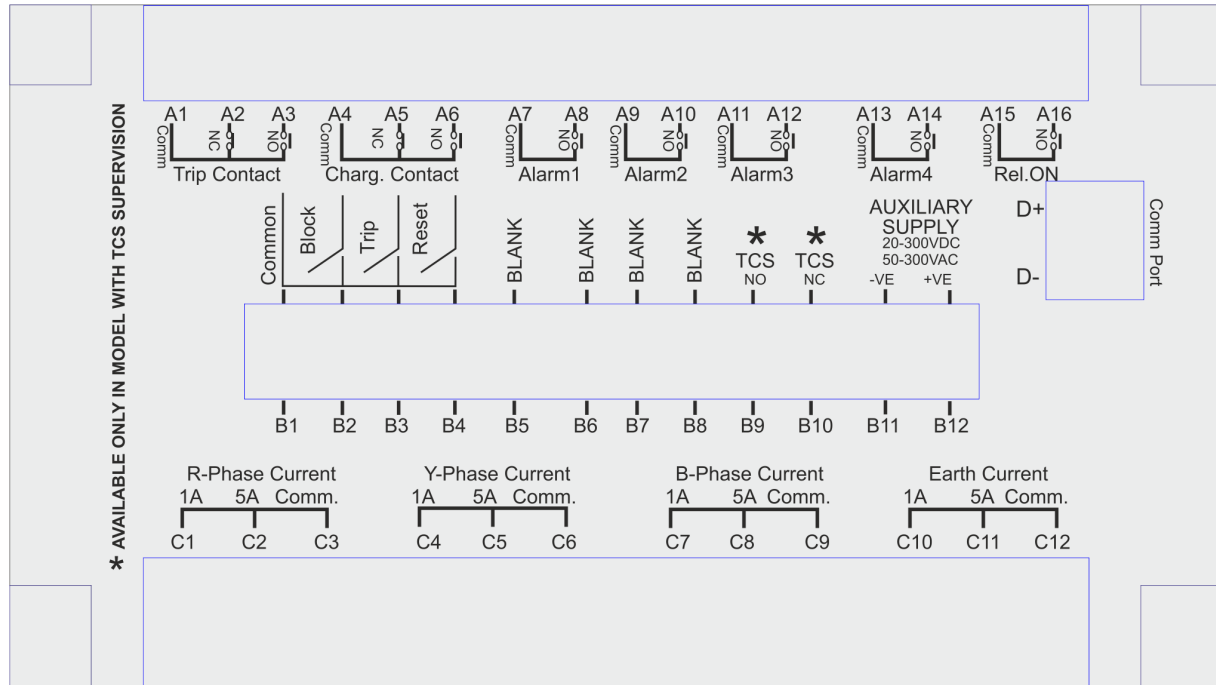

It is our endeavour to constantly upgrade our products, hence specifications are subject to change without any notice.

In case of Digital input, particular block is activated marked as DZ, depending upon the condition either trip contact is activated or relay contact is activated.

14.0 Technical specification

Frequency Range	40-70 Hz
Rated Current	1A /5A
Current withstand	10 times rated current
Measurement Accuracy	
Voltage & Current	± 2%
Frequency	± 0.05 Hz.
Surge 1.2/50Usec	2.5KV
Auxiliary Voltage	20-300VDC & 50-300VAC
Contact Rating	230 VAC, 5A
Cut out Dimensions	190mm X 114mm
Depth	104mm

Numerical Feeder Protection Relay COP-Plus

15.0

Dimensional Details :

