

ILC2 INSTALLATION PROCEDURE: (4 STEPS)




1 INSTALLATION ON THE ROPES:


The best method to install the ILC2 is to place it around (1,5-2) metres above the shackles, where the ropes are parallel, and close it slightly: then bring it down as close as possible to the rope hitch and close the central clamp as tight as possible.

Note: There is no minimum distance from the sensor to the shackles as long as, all the ropes are held by the central clamp and they all rest on the top and bottom cylinders as parallel as possible.


Both screws must be fully tightened.

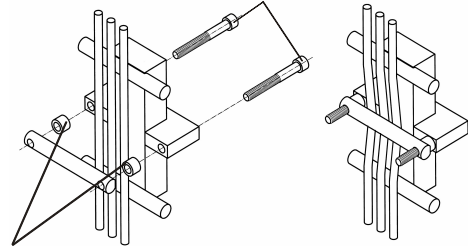

Cylinder spacers limiting the tightness. They are marked with the diameter of the wire ropes in millimetres.

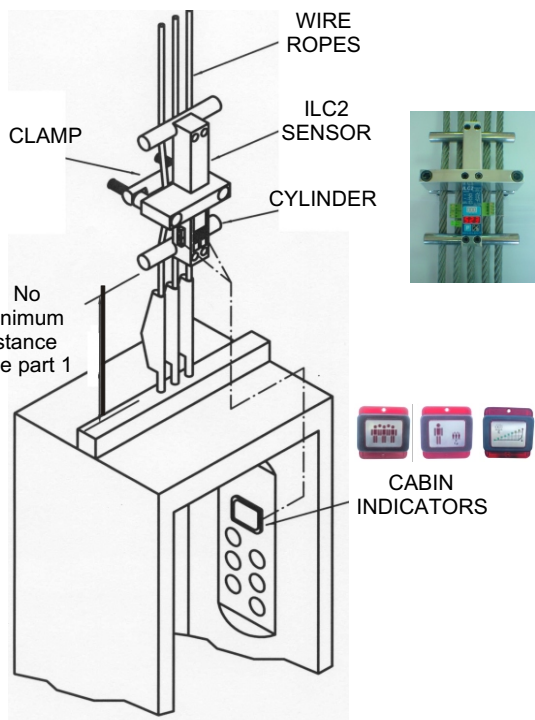

2 CONNECTIONS:

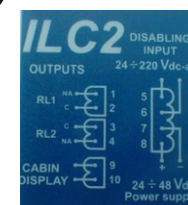


SENSOR WIRING:

- + Vdc.....PIN 8 (+24 / +48)
- Vdc.....PIN 7
- DISABLING.....PIN 6 (24 - 220 Vdc/ac)
- DISABLING.....PIN 5 (24 - 220 Vdc/ac)
- RELAY 1.....PIN 1 (NO)
- RELAY 1.....PIN 2 (C)
- RELAY 2.....PIN 3 (C)
- RELAY 2.....PIN 4 (NO)
- CABIN INDICATOR.....PIN 9
- CABIN INDICATOR.....PIN 10

NOTE: Relays electrical ratings: 250Vac/ 3 A resistive

3 DISABLING OR BLOCKING VOLTAGE:

The disabling signal range is (24-220 V ac/dc);

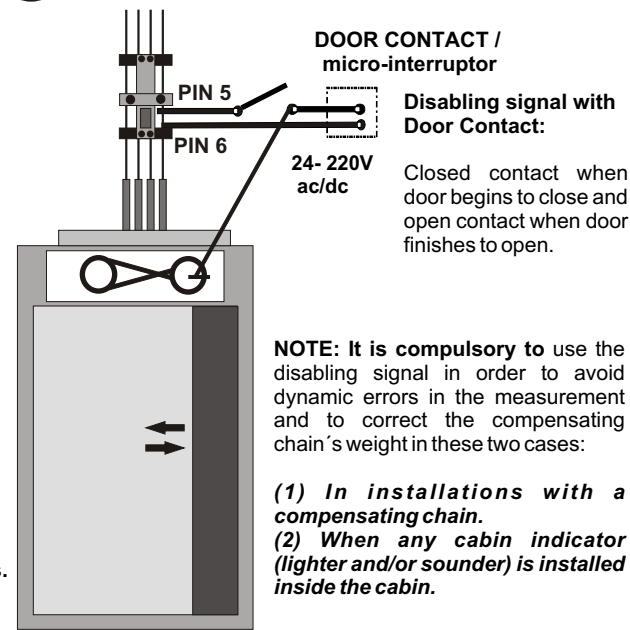


The ILC2 must continuously receive a blocking signal during all the time the lift is travelling, from the moment the doors are closing until the cabin gets on floor and the lift opens doors again. **NOTE: Continuously. (Voltage 24-220Vac/dc).**

The display value will keep frozen after receiving this signal.

Connect the disabling or blocking wires (PIN 5) and (PIN 6) for example using a (door contact micro) fed with voltage once the door begins to close.

4 KEYS AND FIGURES:

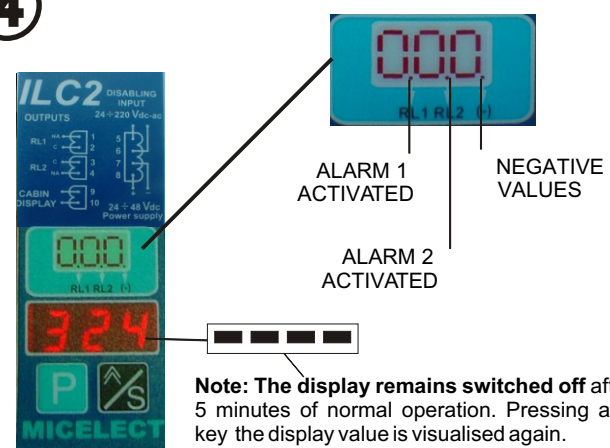

PROGRAMMING KEY "P"

This key allows to go through the different menus in order to perform the settings and to introduce the lift parameters. Once introduced, by pressing the "P" key parameters are saved in eeprom (a non volatile memory to save data in case of power failure.)

(UP-EXIT) KEY "▲/S"

This key enables the user to increase the parameter values in each menu. It has two increasing speeds; one by one or, if pressed on, twenty by twenty. Besides, it allows to leave the menus without saving data in eeprom. In the alarm menus, we go from one alarm to another without going through their parameters. In the measuring mode, keeping this key pressed on enables the visualisation of the installation's real weight without the compensating chain correction, when the blocking signal is activated.

ILC2 PROGRAMMING PROCEDURE: (5 STEPS)



ENGLISH

(Press the "P" key during 3 seconds to begin the programming procedure.)

1 ALARM VALUES:

The ILC2 has two alarms that can be configured by HIGH or by LOW.

HIGH=H= Relay normally open up to the programmed value, above this value close contact.
LOW=L= Relay normally closed up to the programmed value, above this value open contact.
Alarm 2 (RL2) : It is always assigned to **OVERLOAD. 100% Total Load.**
Alarm 1 (RL1) : It can be assigned to **FULL LOAD. 80% Total Load.**

2 ZERO ADJUSTMENT: "TAr"

Make the zero setting with empty cabin selecting "Yes". It is recommended to jump before inside the cabin in order to avoid any possible cabin "hooks" on the guide rails. After that, pressing the "P" key the equipment begins to flicker for 15 seconds to permit the installer to leave the cabin totally empty.

3 CALIBRATION: "DIA/LOA"

We must choose one calibrating mode: **Automatic (DIA):** by the wire rope diameter, or **Manual (LOA):** using a known weight.

DIA: (DIAMETER)

Introduce the diameter in millimetres of the wire ropes. This number must be the same as the number marked on the cylinder spacers that are limiting the tightness.

LOA: (WEIGHT)

Place a known weight, (must be **at least, half the useful load**) inside the cabin. Introduce by means of the keys the weight in Kg, placed inside the cabin and make the weight setting.

4 COMPENSATING CHAIN: "CHA"

If our installation has a compensating chain we must select "YES". If our installation has not got a compensating chain we must select "NO".

NOTE: If we select "YES" we must be sure that the ILC2 wires (PIN 5) and (PIN 6) are connected following the point 3 of the installation procedure.

Closed contact when door begins to close and open contact when door finishes to open.

Note: Contact with a voltage range from 24 to 220 Vac/dc, during all the time lift is travelling. **Note: Continuously.**

5 CABIN INDICATOR: "INDI"

"NO" = No indicator installed inside the cabin.

"PRO" = MICELECT progressive models (MP or LPM)

"BAS" = MICELECT basic indicator ML model or any lighter-sounder system powered by 24Vdc



ERROR CODES:

- ER1...No saved Data.
- ER2...Overload.
- ER3...Power Supply Low.
- ER4...Negative Known weight.
- ER5...Known weight Low/High

SOLUTIONS:

- ER1...Make again the settings.
- ER2...Useful Load > 999 Kg.
- ER3...Check the Power Supply.
- ER4...Some possible "Hooks" / Wrong sensor wiring. (Check the connections).
- ER5...See part 3 Programming procedure (Load). Place the correct useful weight.

MICELECT S.L. C/OTOÑO, 23 Parque Industrial "Las Monjas" 28850 Torrejón de Ardoz MADRID (SPAIN)

Tel: +34 91 660 03 47 Fax: +34 91 660 04 73 e-mail: micelect@micelect.com Internet: <http://www.micelect.com>

